



MST Boiler Feed Water Pump

Milestone(China) Engineering & Manufacturing Co., Ltd.

Milestone(International) Pump Pty. Ltd.

目 录

CONTENTS

DG 系列中低压、次高压锅炉给水泵	1
DG Series middle and low pressure, hypo-high-pressure boiler water supply pump	
产品用途、型号意义说明、结构说明	1
Product purpose, model meaning, about the structure	
DG型中低压锅炉给水泵结构图	4
Structural drawing of DG model middle and low pressure, hypo-high-pressure boiler water supply pump	
DG型次高压锅炉给水泵结构图	6
Structural drawing of DG model hypo-high-pressure boiler water supply pump	
DG型中低压锅炉给水泵性能表	7
Performance table of DG model middle and low pressure boiler water supply pump	
DG型次高压锅炉给水泵性能表	10
Performance table of DG model hypo-high-pressure boiler water supply pump	
DG型中低压锅炉给水泵性能曲线图	11
Performance curve figures of DG model middle and low pressure boiler water supply pump	
DG型次高压锅炉给水泵性能曲线图	13
Performance curve figures of DG model hypo-high-pressure boiler water supply pump	
泵的装配与检测	14
Assembly and detection of pump	
泵的安装	15
Installation of pump	
泵的运行	18
Running of the pump	
泵的维修	19
Repair of pump	
故障原因及解决方法	20
Failures and troubleshooting of pump	
泵的外形和安装尺寸	22
Out-form and installation dimensions of pump	
DG 型高压锅炉给水泵	30
DG Type high-pressure boiler water feed pump	
用途、型号意义、结构、传动、材料	30
Application, model meaning, construction, drive, material	
DG型高压锅炉给水泵结构图	31
Standard construction of type DG pumps	
性能曲线图	32
Performance curve figures	
DG型高压锅炉给水泵性能参数	36
DG Type high pressure boiler feed pumps performance	
成套供应范围、订货须知	37
Range of completed supply, notice at order	

DG SERIES BOILER WATER SUPPLY PUMP

DG 系列中低压、次高压锅炉给水泵

DG SERIES MIDDLE AND LOW PRESSURE, HYPO-HIGH-PRESSURE BOILER WATER SUPPLY PUMP

产品用途 Product purpose

DG型泵是卧式多级离心泵，它适合于输送清水(含杂质质量小于1%，颗粒度小于0.1mm)及物理化学性质类似于清水的其它液体。

DG型中低压锅炉给水泵输送介质温度不大于105℃，适用于小型锅炉给水或输送类似于热水等场合。

性能范围

流量：3.75~185m³/h 配套功率：4.0~400kW

扬程：69~684m 进口直径：40~150mm

DG型次高压锅炉给水泵输送介质温度不大于160℃，适用于小型锅炉给水或输送类似于热水等场合。

性能范围

流量：15~300m³/h 配套功率：75~1250kW

扬程：390~1050m 进口直径：65~200mm

Model DG pump is a horizontal multi-stage centrifugal pump and suitable for transporting pure water (with the contained foreign matters' content less than 1% and graininess less than 0.1mm) and other liquids of both physical and chemical natures similar to those of pure water.

DG model middle and low pressure boiler water supply pump is applicable to transport medium with temperature of not higher than 105℃, and is also applicable for small boiler water supply or transporting medium similar to hot water.

Performance range of model DG series

Flow: 3.75~185m³/h Corollary power: 4.0~400kW

Head: 69~684m Inlet diameter: 40~150mm


DG model hypo-high-pressure boiler water supply pump is applicable to transport medium with temperature of not higher than 160℃, and is also applicable for small boiler water supply or transporting medium similar to hot water.

Performance range of model DG series

Flow: 15~300m³/h Corollary power: 75~1250kW

Head: 390~1050m Inlet diameter: 65~200mm

型号意义说明 Model meaning

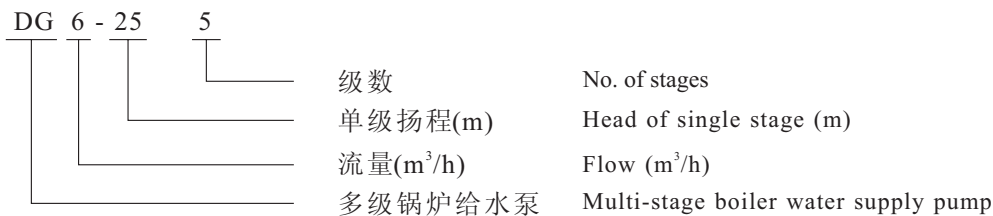

结构说明 About the structure

本系列的卧式多级离心泵为两端支承，壳体部分是节段式，泵的传动方式是通过弹性联轴器与电动机联接，泵的旋转方向，从驱动端看，泵为顺时针方向旋转。泵的结构说明 见图1。

定子部分

主要由吸入段、中段、吐出段、导叶、填料函体等分别用拉紧螺栓联接成一体，吐出口及吸入口均为垂直向上。

转子部分

主要由轴、叶轮、平衡盘及轴套等零件组成。

For this series horizontal multi-stage centrifugal pump, both ends of it are supported, the casing portion is in a sectional form, it is connected to and actuated by a motor via a resilient clutch and the rotating direction of it, viewing from the actuating end, is clockwise. Refer to Fig. 1 for the structure of it.

Stator portion

Consists of suck-in section, middle-section, spitting section, guide vane, packing etc., which are linked together with a take-up bolt, with both suck-in and spitting mouths vertically upward.

Rotor portion

Consists of a shaft, impeller, balancing disk, muff etc. parts.

轴承部分

整个转子由轴两端的滚柱轴承或滑动轴承来支承，轴承采用油脂润滑或20#机油。

密封及冷却

泵壳体中的吸入段、中段、吐出段之间的结合面涂以二硫化钼润滑脂密封。转子部分与固定部分之间靠密封环、导叶套、填料等密封。轴封的填料松紧程度必须适当，以液体能一滴一滴渗出为宜。禁止空车下运行。当密封环和导叶套的磨损程度已影响泵的工作和性能时，应予以及时更换。在轴的轴封处装有可更换的轴套保护泵轴。

使用时当被输送的介质温度高于80°C时，必须向水冷填料压盖和轴封冷却室通入冷却水。冷却水为常温清水，水压为1.5~3Kg/cm²。各型泵冷却水管路接口位置不同，管路接口沿轴向位置见泵结构图，径向位置见表1。

轴封分为填料密封和机械密封，填料密封的水封水为常温软化水，压力为2~3kg/cm²。机械密封的冲洗水亦为常温软化水，压力须比进口压力大3kg/cm²以上。

Bearing portion


The whole rotor is supported by the roller bearings or sliding bearings on both ends of the shaft and the bearings are lubricated with grease or 20# engine oil.

Cooling and seal of pump









The joint-part between suction section, intermediate section and discharge section will be coated with molybdenum disulfide lubricating grease as seal. Rotor and fixed parts will be sealed by seal ring, guide-vane jacket and packing. The packing tensile degree of shaft seal should be proper and seep should be feasible dip by dip Unload run should be forbid. The seal ring and guide vane jacket should be replaced if they are too worn to be used any more and even do harm to pump work. There is spare shaft sleeve near shaft seal to protect shaft of pump.

When temperature of the liquid transferred is above 80°C, cooled water should be filled to the water cooling packing gland and shaft seal cooling chamber. Cooled water should be clean water in normal degree. The pressure of water should be 1.5~3Kg/cm². The positions of cooling water pipe joints are different for various kind of water pump. Please refer to construction drawing of pump for axial position, and refer to chart 1 for radial position.

Shaft seals are classified as packing seal and mechanical seal. The water seal water of packing seal is softened water, with pressure of 2~3kg/cm². The flushing water of mechanical seal is softened water, whose pressure shall be 3kg/cm² higher than the inlet pressure.

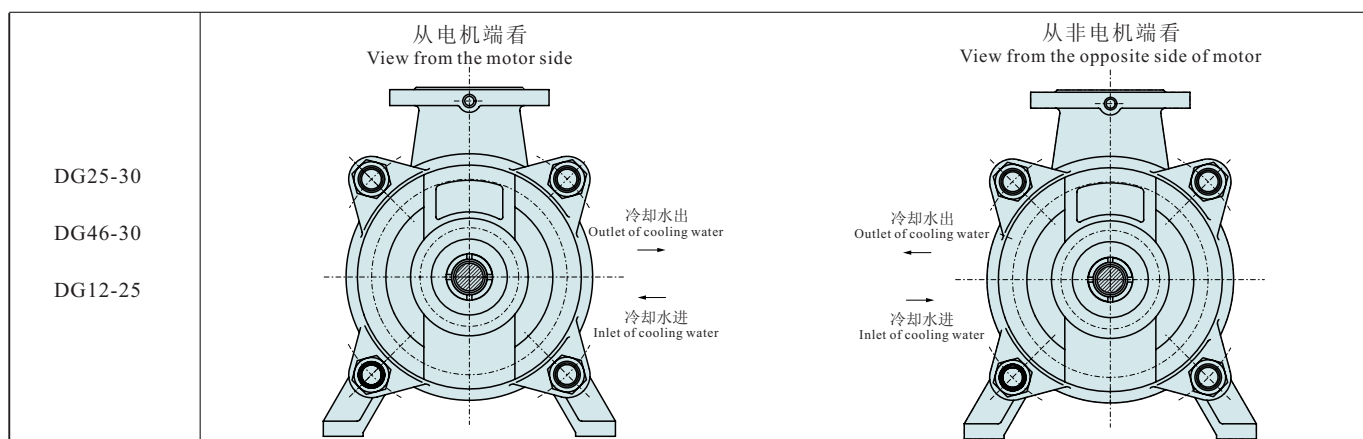

DG SERIES BOILER WATER SUPPLY PUMP
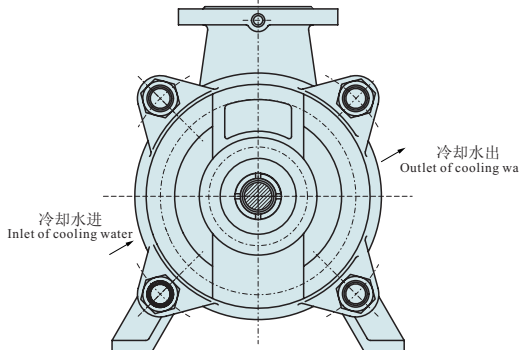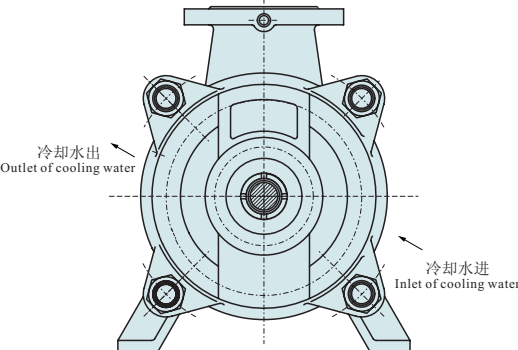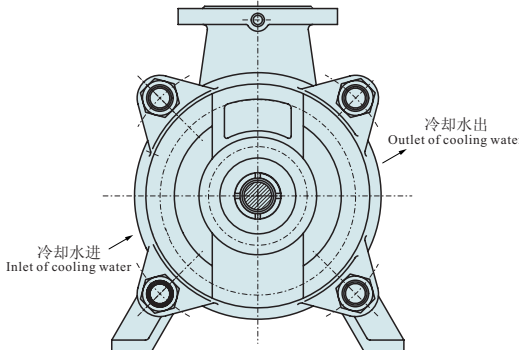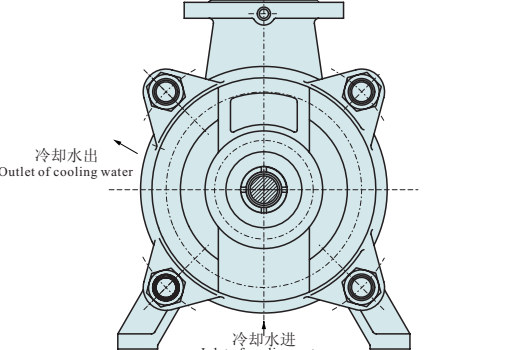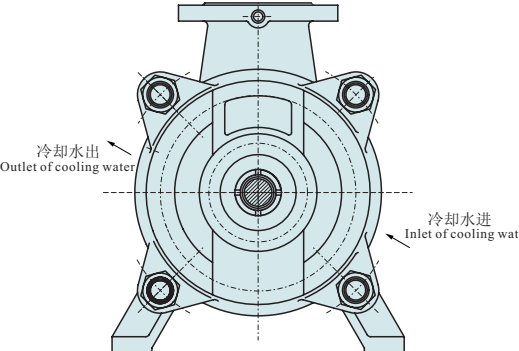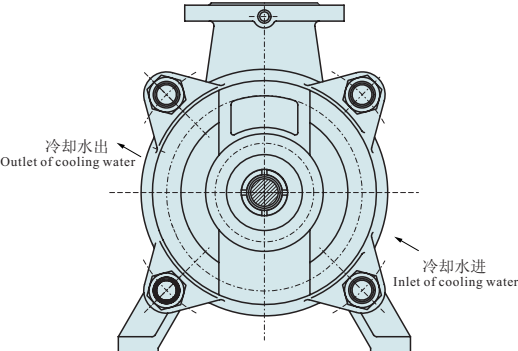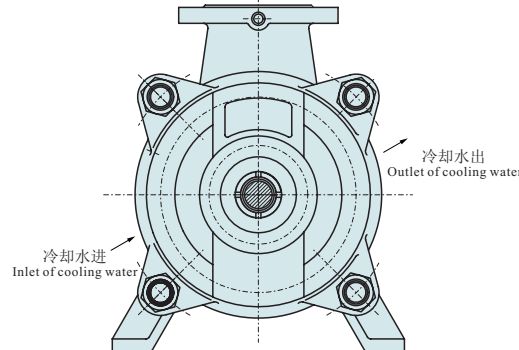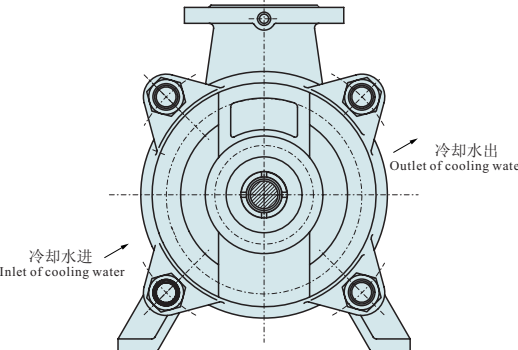
<p>DG6-25 DG280-100 DG150-100</p>	<p>从电机端看 View from the motor side</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>	<p>从非电机端看 View from the opposite side of motor</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>
<p>DG25-50 DG46-50</p>	<p>从电机端看 View from the motor side</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>	<p>从非电机端看 View from the opposite side of motor</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>
<p>DG85-45 DG85-67 DG155-67</p>	<p>从电机端看 View from the motor side</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>	<p>从非电机端看 View from the opposite side of motor</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>
<p>DG25-80 DG45-80 DG85-80</p>	<p>从电机端看 View from the motor side</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>	<p>从非电机端看 View from the opposite side of motor</p>  <p>冷却水出 Outlet of cooling water</p> <p>冷却水进 Inlet of cooling water</p>

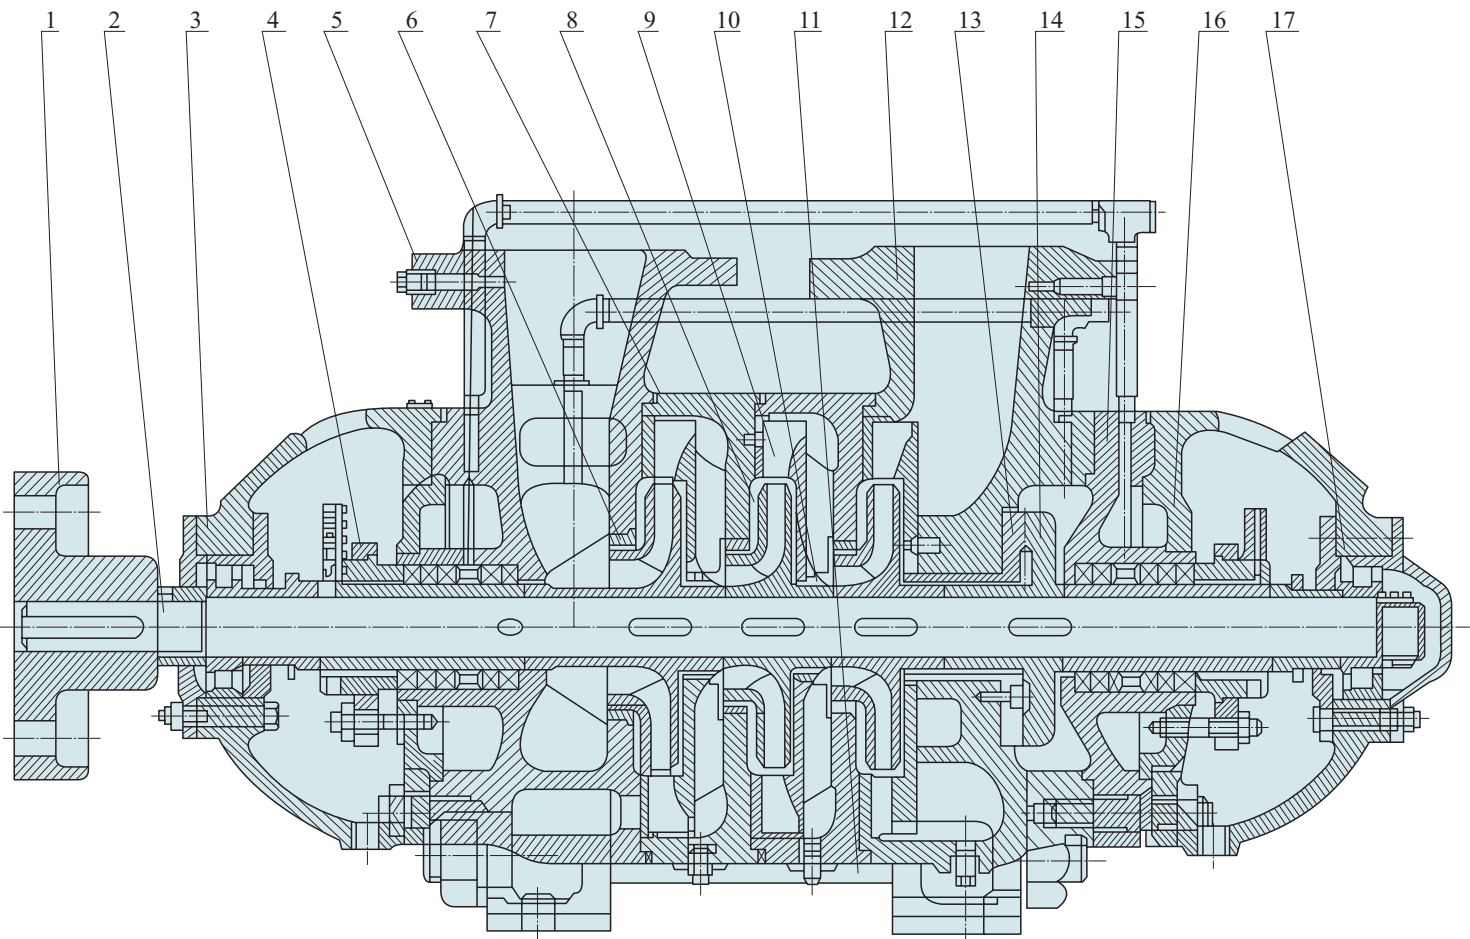


图1 fig.1

1	柱销弹性联轴器部件 Column resilient clutch part	2	轴 Shaft	3	滚动轴承部件 Roller bearing part	4	水冷填料压盖 Water cooled packing gland	5	吸入段 Suck-in section
6	密封环 Seal ring	7	中段 Middle section	8	叶轮 Impeller	9	导叶 Guide vane	10	导叶套 Guide vane sleeve
11	拉紧螺栓 Take-up bolt	12	吐出段 Spitting section	13	平衡套 Balancing sleeve	14	平衡盘 Balancing disk	15	填料函体 Packing
16	水冷室盖 Cover of water cooling room	17	轴承 Bearing						

DG型中低压锅炉给水泵结构图

Structural drawing of DG model middle and low pressure boiler water supply pump

DG型中低压锅炉给水泵结构图

Structural drawing of DG model middle and low pressure boiler water supply pump


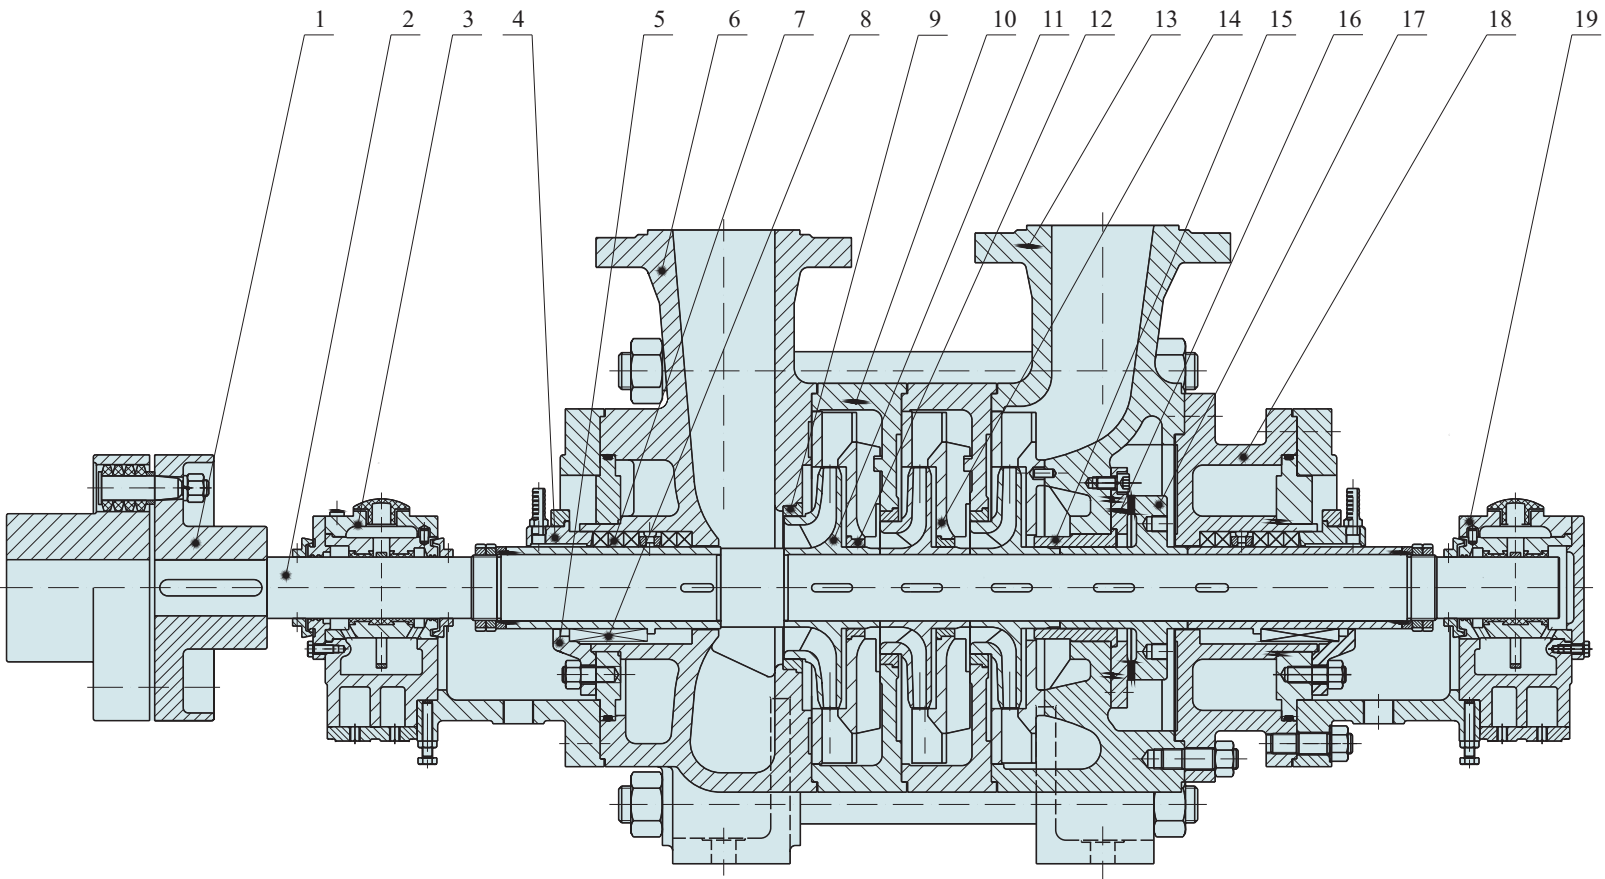


图2 fig.2

1	柱销弹性联轴器部件 Column resilient clutch part	2	轴 Shaft	3	前轴承部件 Bearing part	4	水冷填料压盖 Water cooled packing gland	5	机封压盖 Mechanical seal gland
6	吸入段 Suck-in section	7	填料 Stuffing	8	机械密封 Mechanical seal	9	密封环 Seal ring	10	中段 Middle section
11	叶轮 Impeller	12	导叶套 Guide vane sleeve	13	吐出段 Spitting section	14	导叶 Guide vane	15	平衡套 Balancing sleeve
16	平衡环 Balancing ring	17	平衡盘 Balancing disk	18	填料函体 Stuffing content	19	后轴承部件 Bearing part		

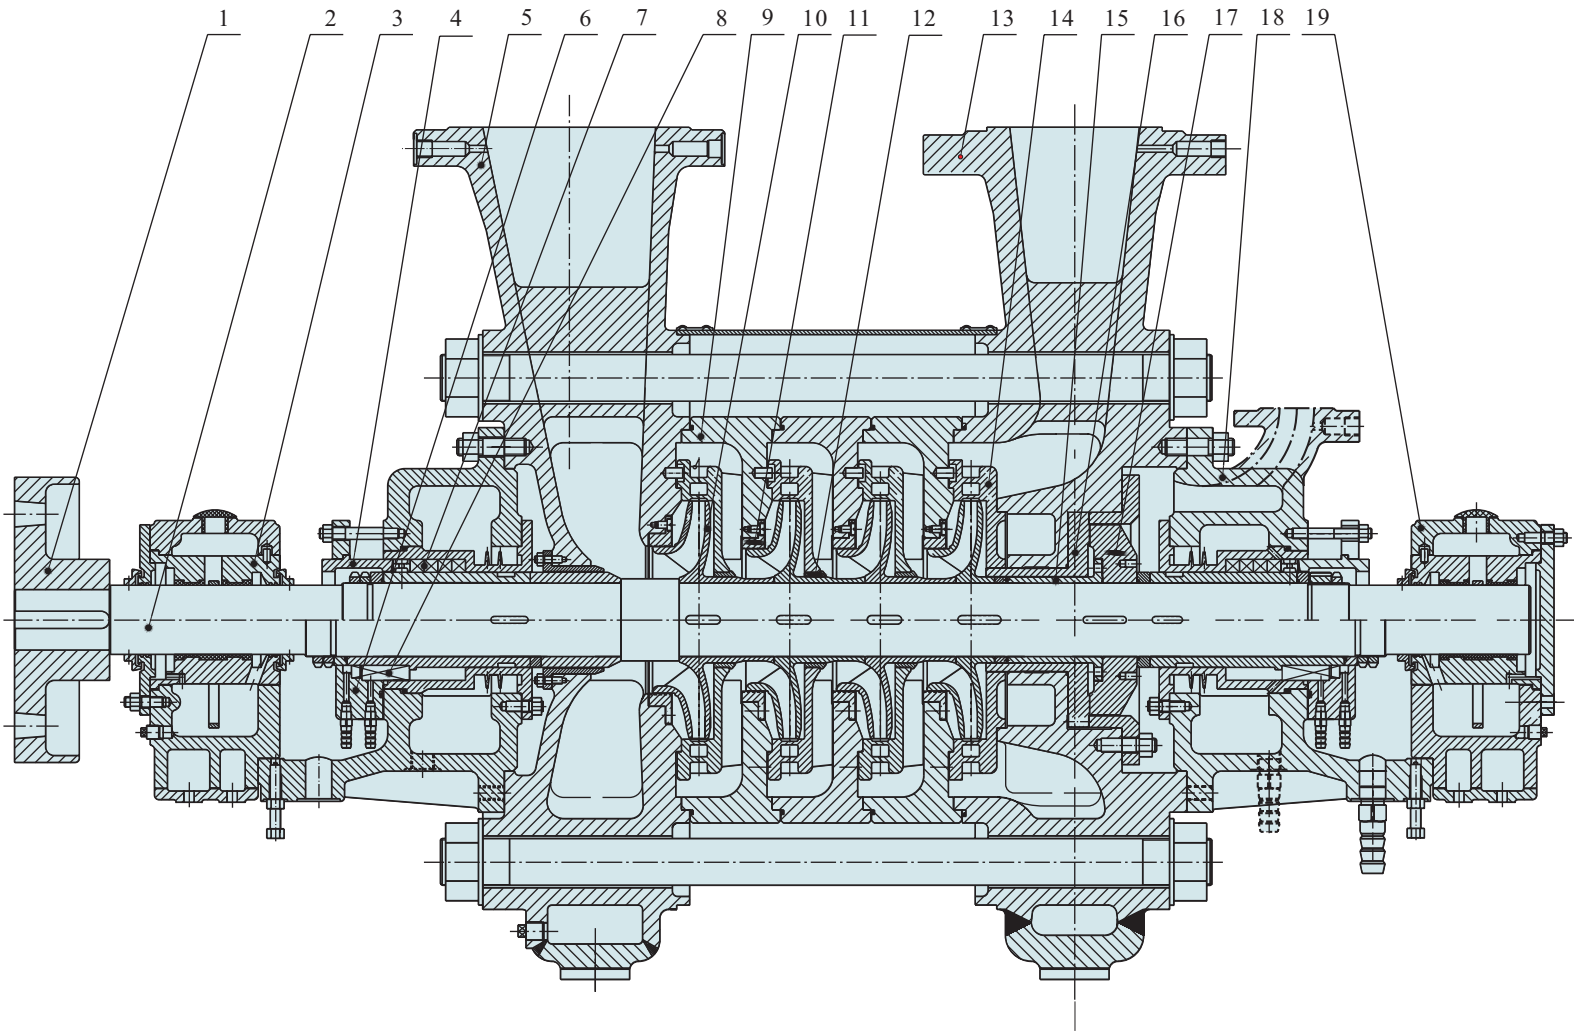

DG型次高压锅炉给水泵结构图
Structural drawing of DG model hypo-high-pressure boiler water supply pump

图3 fig.3

1	柱销弹性联轴器部件 Column resilient clutch part	2	轴 Shaft	3	前轴承部件 Bearing part	4	填料压盖 Stuffing gland	5	吸入段 Suck-in section
6	机封压盖 Mechanical seal gland	7	填料 Stuffing	8	机械密封 Mechanical seal	9	中段 Middle section	10	叶轮 Impeller
11	密封环 Seal ring	12	导叶套 Guide vane sleeve	13	吐出段 Spitting section	14	导叶 Guide vane	15	平衡套 Balancing sleeve
16	平衡环 Balancing ring	17	平衡盘 Balancing disk	18	(首)尾盖 (Front)Behind cover	19	后轴承部件 Bearing part		

DG SERIES BOILER WATER SUPPLY PUMP

DG型中低压锅炉给水泵性能表 Performance table of DG model middle and low pressure boiler water supply pump

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH)r (m)
					轴 功率 Shaft	电机 功率 Motor		
DG6-25	3	2950	3.75	76.5	2.37		33	2
			6.3	75	2.86	4.0	45	2
			7.5	73.5	3.19		47	2.5
	4		3.75	102	3.16		33	2
			6.3	100	3.81	5.5	45	2
			7.5	98	4.26		47	2.5
	5		3.75	127.5	3.95		33	2
			6.3	125	4.77	5.5	45	2
			7.5	122.5	5.32		47	2.5
	6		3.75	153	4.73		33	2
			6.3	150	5.72	7.5	45	2
			7.5	147	6.39		47	2.5
7	3.75	178.5	5.52		33	2		
	6.3	175	6.67	7.5	45	2		
	7.5	171.5	7.45		47	2.5		
8	3.75	204	6.31		33	2		
	6.3	200	7.63	11	45	2		
	7.5	196	8.52		47	2.5		
9	3.75	229.5	7.1		33	2		
	6.3	225	8.58	11	45	2		
	7.5	220.5	9.58		47	2.5		
10	3.75	255	7.89		33	2		
	6.3	250	9.53	15	45	2		
	7.5	245	10.65		47	2.5		
11	3.75	280.5	8.68		33	2		
	6.3	275	10.5	15	45	2		
	7.5	269.5	11.71		47	2.5		
12	3.75	306	9.47		33	2		
	6.3	300	11.44	15	45	2		
	7.5	294	12.78		47	2.5		
DG12-25	3	2950	7.5	84.6	3.93		44	2
			12.5	75	4.73	5.5	54	2
			15	69	5.32		53	2.5
	4		7.5	112.8	5.24		44	2
			12.5	100	6.3	7.5	54	2
			15	92	7.09		53	2.5
	5		7.5	141	6.55		44	2
			12.5	125	7.88	11	54	2
			15	115	8.89		53	2.5
	6		7.5	169.2	7.85		44	2
			12.5	150	9.46	15	54	2
			15	138	10.64		53	2.5
7	7.5	197.5	9.16		44	2		
	12.5	175	11.0	15	54	2		
	15	161	12.41		53	2.5		
8	7.5	225.6	10.41		44	2		
	12.5	200	12.61	15	54	2		
	15	184	14.18		53	2.5		
9	7.5	253.8	11.78		44	2		
	12.5	225	14.18	18.5	54	2		
	15	207	15.95		53	2.5		

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH)r (m)
					轴 功率 Shaft	电机 功率 Motor		
DG12-25	10	2950	7.5	282	13.09		44	2
			12.5	250	15.76	18.5	54	2
			15	230	17.73		53	2.5
	11		7.5	310.2	14.4		44	2
			12.5	275	17.34	22	54	2
			15	253	19.5		53	2.5
12	7.5	338.4	15.7		44	2		
	12.5	300	18.9	22	54	2		
	15	276	21.3		53	2.5		
DG12-50	3	2950	7.5	162	8.8		37.8	2
			12.5	150	10.6	18.5	48	2
			15	139.5	11.9		48	2.5
	4		7.5	216	11.7		37.8	2
			12.5	200	14.1	22	48	2
			15	186	15.9		48	2.5
	5		7.5	270	14.6		37.8	2
			12.5	250	17.7	30	48	2
			15	232.5	19.8		48	2.5
	6		7.5	324	17.6		37.8	2
			12.5	300	21.3	30	48	2
			15	279	23.7		48	2.5
7	7.5	378	20.4		37.8	2		
	12.5	350	24.8	37	48	2		
	15	325.5	27.7		48	2.5		
8	7.5	432	23.3		37.8	2		
	12.5	400	28.4	37	48	2		
	15	372	31.7		48	2.5		
9	7.5	468	26.3		37.8	2		
	12.5	450	31.9	45	48	2		
	15	418.5	35.7		48	2.5		
10	7.5	540	29.2		37.8	2		
	12.5	500	35.5	45	48	2		
	15	465	39.6		48	2.5		
11	7.5	594	32.1		37.8	2		
	12.5	550	39.0	55	48	2		
	15	511.5	43.5		48	2.5		
12	7.5	648	35.0		37.8	2		
	12.5	600	42.6	75	48	2		
	15	558	47.8		48	2.5		
DG25-30	3	2950	15	102	8.33		50	2.2
			25	90	9.88	15	62	2.2
			30	82.5	10.7		63	2.6
	4		15	136	11.1		50	2.2
			25	120	13.1	18.5	62	2.2
			30	110	14.26		63	2.6
5	15	170	13.89		50	2.2		
	25	150	16.47	22	62	2.2		
	30	137.5	17.83		63	2.6		
6	15	204	16.67		50	2.2		
	25	180	19.17	30	62	2.2		
	30	165	21.4		63	2.6		

DG 系列锅炉给水泵

DG型中低压锅炉给水泵性能表 Performance table of DG model middle and low pressure boiler water supply pump

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH) (m)
					轴 功率 Shaft	电机 功率 Motor		
DG25-30	7	2950	15	238	19.44		50	2.2
			25	210	23.1	30	62	2.2
			30	192.5	24.96		63	2.6
	8		15	272	22.22		50	2.2
			25	240	26.4	37	62	2.2
			30	220	28.53		63	2.6
	9		15	306	25		50	2.2
			25	270	29.65	37	62	2.2
			30	247.5	32.1		63	2.6
	10		15	340	27.8		50	2.2
			25	300	32.9	45	62	2.2
			30	275	35.7		63	2.6
DG25-50	3	15	154.5	15.78		40	2.5	
		25	150	18.91	22	54	2.8	
		30	144	20.64		57	3.2	
	4	15	206	21.04		40	2.5	
		25	200	25.22	30	54	2.8	
		30	192	27.5		57	3.2	
	5	15	257.5	26.2		40	2.5	
		25	250	31.52	37	54	2.8	
		30	240	34.40		57	3.2	
	6	15	309	31.56		40	2.5	
		25	300	37.82	45	54	2.8	
		30	288	41.28		57	3.2	
	7	15	380.5	38.86		40	2.5	
		25	350	44.1	55	54	2.8	
		30	336	48.16		57	3.2	
	8	15	412	42		40	2.5	
		25	400	50.45	75	54	2.8	
		30	384	55.04		57	3.2	
	9	15	463.5	47.33		40	2.5	
		25	450	56.74	75	54	2.8	
		30	432	61.92		57	3.2	
	10	15	515	52.59		40	2.5	
		25	500	63.04	75	54	2.8	
		30	480	68.8		57	3.2	
11	15	566	57.8		40	2.5		
	25	550	69.3	90	54	2.8		
	30	528	75.68		57	3.2		
12	15	618	63.11		40	2.5		
	25	600	75.65	110	54	2.8		
	30	576	82.56		57	3.2		
DG46-30	3	2950	30	102	13.02		64	2.4
			46	90	16.11	22	70	3
			55	81	18.84		68	4.6
	4		30	136	17.36		64	2.4
			46	120	21.48	30	70	3
			55	108	23.79		68	4.6

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH) (m)
					轴 功率 Shaft	电机 功率 Motor		
DG46-30	5	2950	30	170	21.7		64	2.4
			46	150	26.85	37	70	3
			55	135	29.74		68	4.6
	6		30	204	26.04		64	2.4
			46	180	32.21	37	70	3
			55	162	35.68		68	4.6
	7		30	238	30.38		64	2.4
			46	210	37.58	45	70	3
			55	189	41.63		68	4.6
	8		30	274	34.72		64	2.4
			46	240	42.95	55	70	3
			55	216	47.58		68	4.6
9	30	306	39.06		64	2.4		
	46	270	48.32	55	70	3		
	55	243	53.53		68	4.6		
10	30	340	43.3		64	2.4		
	46	300	53.7	75	70	3		
	55	270	59.5		68	4.6		
DG46-50	3	2950	30	166.5	25.19		54	2.5
			46	150	29.83	37	63	2.8
			55	138	32.3		64	3.2
	4		30	222	33.59		54	2.5
			46	200	39.77	45	63	2.8
			55	184	43.06		64	3.2
	5		30	277.5	41.98		54	2.5
			46	250	49.71	55	63	2.8
			55	230	53.85		64	3.2
	6		30	333	50.38		54	2.5
			46	300	59.65	75	63	2.8
			55	276	64.59		64	3.2
	7		30	388.5	58.78		54	2.5
			46	350	69.6	90	63	2.8
			55	322	75.36		64	3.2
	8		30	440	67.18		54	2.5
			46	400	79.54	90	63	2.8
			55	368	86.12		64	3.2
	9		30	499.5	75.57		54	2.5
			46	450	89.48	110	63	2.8
			55	414	96.89		64	3.2
	10		30	555	83.97		54	2.5
			46	500	99.42	132	63	2.8
			55	460	107.66		64	3.2
11	30	610.5	92.37		54	2.5		
	46	550	109.36	132	63	2.8		
	55	506	118.42		64	3.2		
12	30	666	100.8		54	2.5		
	46	600	119.3	132	63	2.8		
	55	552	129.2		64	3.2		

DG SERIES BOILER WATER SUPPLY PUMP

DG型中低压锅炉给水泵性能表 Performance table of DG model middle and low pressure boiler water supply pump

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH)r (m)
					轴 功率 Shaft	电机 功率 Motor		
DG85-45	2	2950	55	102	24.25		63	3.2
			85	90	28.94	37	72	4.2
			100	78	30.33		70	5.2
	3		55	153	36.38		63	3.2
			85	135	43.4	55	72	4.2
			100	117	45.52		70	5.2
	4		55	204	48.5		63	3.2
			85	180	57.87	75	72	4.2
			100	156	60.7		70	5.2
	5		55	255	60.63		63	3.2
			85	225	72.34	90	72	4.2
			100	195	75.86		70	5.2
	6		55	306	72.75		63	3.2
			85	270	86.81	110	72	4.2
			100	234	91.04		70	5.2
	7		55	357	84.88		63	3.2
			85	315	101.3	132	72	4.2
			100	273	106.2		70	5.2
8	55	408	97		63	3.2		
	85	360	115.7	132	72	4.2		
	100	312	121.4		70	5.2		
9	55	459	109.1		63	3.2		
	85	405	130.2	160	72	4.2		
	100	351	136.6		70	5.2		
DG85-67	3	2950	55	222	57.3		58	3.3
			85	201	68.4	90	68	4.0
			100	183	73.3		68	4.4
	4		55	296	76.4		58	3.3
			85	268	91.2	110	68	4.0
			100	244	97.7		68	4.4
	5		55	370	95.6		58	3.3
			85	335	114	132	68	4.0
			100	305	122.2		68	4.4
	6		55	444	114.7		58	3.3
			85	402	136.9	160	68	4.0
			100	366	146.6		68	4.4
	7		55	518	133.8		58	3.3
			85	469	159.6	200	68	4.0
			100	427	171		68	4.4
	8		55	592	152.9		58	3.3
			85	536	182.4	220	68	4.0
			100	488	195.4		68	4.4
9	55	666	172		58	3.3		
	85	603	205.2	250	68	4.0		
	100	549	219.9		68	4.4		
DG155-67	3	2950	100	228	97.0		64	3.2
			155	201	114.7	132	74	5.0
			185	177	123.9		72	6.6
	4		100	304	129.3		64	3.2
			155	268	152.9	200	74	5.0
			185	236	165.1		72	6.6

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH)r (m)
					轴 功率 Shaft	电机 功率 Motor		
DG155-67	5	2950	100	380	161.6		64	3.2
			155	335	191.1	220	74	5.0
			185	295	206.4		72	6.6
	6		100	456	194		64	3.2
			155	402	229.3	280	74	5.0
			185	354	247.7		72	6.6
	7		100	532	226.3		64	3.2
			155	469	267.5	315	74	5.0
			185	413	289		72	6.6
	8		100	608	258.6		64	3.2
			155	536	305.7	355	74	5.0
			185	472	330.3		72	6.6
9	100	684	290.9		64	3.2		
	155	603	344	400	74	5.0		
	185	531	371.6		72	6.6		
DG280-43	3	1480	185	141	103.0		69	3.0
			280	129	127.7	160	77	4.7
			335	114	138.7		75	6.0
	4		185	188	137.3		69	3.0
			280	172	170.3	200	77	4.7
			335	152	184.9		75	6.0
	5		185	235	171.6		69	3.0
			280	215	212.9	250	77	4.7
			335	190	231.1		75	6.0
	6		185	282	205.9		69	3.0
			280	258	255.5	315	77	4.7
			335	228	277.3		75	6.0
7	185	329	240.2		69	3.0		
	280	301	298.1	355	77	4.7		
	335	266	323.6		75	6.0		
8	185	376	274.5		69	3.0		
	280	344	340.7	400	77	4.7		
	335	304	369.8		75	6.0		
9	185	423	308.9		69	3.0		
	280	387	383.2	450	77	4.7		
	335	342	416.0		75	6.0		

DG 系列锅炉给水泵







DG型次高压锅炉给水泵性能表 Performance table of DG model hypo-high-pressure boiler water supply pump

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH) (m)
					轴 功率 Shaft	电机 功率 Motor		
DG25-80	5	2980	15	433.0	55.00		32	3.2
			25	400.0	60.50	75.0	45	3.5
			30	390.0	72.10		44	5
	6		15	519.6	66.00		32	3.2
			25	480.0	72.60	90.0	45	3.5
			30	468.0	86.52		44	5
	7		15	606.2	77.00		32	3.2
			25	560.0	84.70	110.0	45	3.5
			30	546.0	100.94		44	5
	8		15	692.8	88.00		32	3.2
			25	640.0	96.80	132.0	45	3.5
			30	624.0	115.36		44	5
9	15	779.4	99.00		32	3.2		
	25	720.0	108.90	132.0	45	3.5		
	30	702.0	129.78		44	5		
10	15	866.0	110.00		32	3.2		
	25	800.0	121.00	160.0	45	3.5		
	30	780.0	144.20		44	5		
11	15	952.6	121.00		32	3.2		
	25	880.0	133.10	200.0	45	3.5		
	30	858.0	158.62		44	5		
12	15	1039.2	132.00		32	3.2		
	25	960.0	145.20	200.0	45	3.5		
	30	936.0	173.04		44	5		
DG45-80	7	2950	36	585.2	114.8		50	3.9
			45	560.0	124.6	180	55	4
			62	477.4	143.5		56	5.5
	8		36	668.8	131.2		50	3.9
			45	640.0	142.4	200	55	4
			62	545.6	164.0		56	5.5
	9		36	752.4	147.6		50	3.9
			45	720.0	160.2	220	55	4
			62	613.8	184.5		56	5.5
	10		36	836.0	164.0		50	3.9
			45	800.0	178.0	250	55	4
			62	682.0	205.0		56	5.5
11	36	919.6	180.4		50	3.9		
	45	880.0	195.8	280	55	4		
	62	750.2	225.5		56	5.5		
12	36	1003.2	196.8		50	3.9		
	45	960.0	213.6	280	55	4		
	62	818.4	246.0		56	5.5		
DG85-80	7	2950	54	616	170.9		53	4.5
			85	560	199.3	250	65	4.4
			108	490	218.4		66	5.3
	8		54	704	195.3		53	4.5
			85	640	227.8	280	65	4.4
			108	560	249.6		66	5.3

型号 Model	级数 No.Of Stage	转速 Speed (r/min)	流量 Flow (m³/h)	扬程 Head (m)	功率Power(kW)		效率 Efficiency (%)	必需汽 蚀余量 (NPSH) (m)
					轴 功率 Shaft	电机 功率 Motor		
DG85-80	9	2950	54	792	219.8		53	4.5
			85	720	256.3	355	65	4.4
			108	630	280.7		66	5.3
	10		54	880	244.2		53	4.5
			85	800	284.8	355	65	4.4
			108	700	311.9		66	5.3
	11		54	968	268.6		53	4.5
			85	880	313.2	400	65	4.4
			108	770	343		66	5.3
	12		54	1056	293		53	4.5
			85	960	341.7	450	65	4.4
			108	840	374.3		66	5.3
DG150-100	6	2950	120	630	307		67	3.4
			150	600	353	450	70	4.8
			180	540	368		72	5.5
	7		120	735	359		67	3.4
			150	700	412	500	70	4.8
			180	630	429		72	5.5
	8		120	840	410		67	3.4
			150	800	470	630	70	4.8
			180	720	491		72	5.5
	9		120	945	461		67	3.4
			150	900	518	630	70	4.8
			180	810	552		72	5.5
10	120	1050	512		67	3.4		
	150	1000	588	800	70	4.8		
	180	900	613		72	5.5		
DG280-100	4	2950	250	420.0	386.4		74	5.1
			280	400.0	396.0	450	77	5.6
			300	392.0	416.0		77	5.9
	5		250	525.0	483.0		74	5.1
			280	500.0	495.0	630	77	5.6
			300	490.0	520.0		77	5.9
	6		250	630.0	579.6		74	5.1
			280	600.0	594.0	710	77	5.6
			300	588.0	624.0		77	5.9
	7		250	735.0	676.2		74	5.1
			280	700.0	693.0	800	77	5.6
			300	686.0	728.0		77	5.9
8	250	840.0	772.8		74	5.1		
	280	800.0	792.0	1000	77	5.6		
	300	784.0	832.0		77	5.9		
9	250	945.0	869.4		74	5.1		
	280	900.0	891.0	1120	77	5.6		
	300	882.0	936.0		77	5.9		
10	250	1050.0	966.0		74	5.1		
	280	1000.0	990.0	1250	77	5.6		
	300	980.0	1040.0		77	5.9		






DG型中低压锅炉给水泵性能曲线图

Performance curve figures of DG model middle and low pressure boiler water supply pump

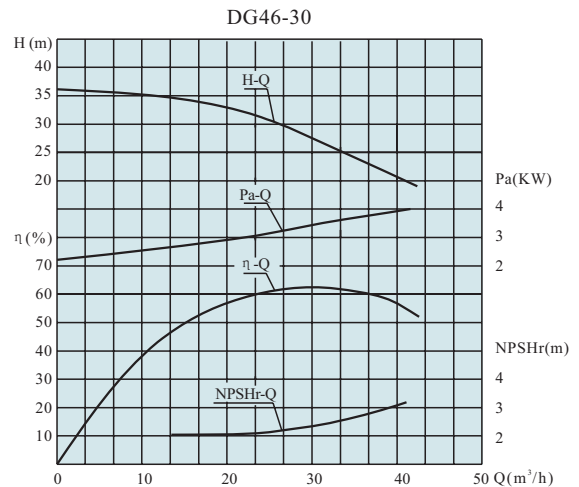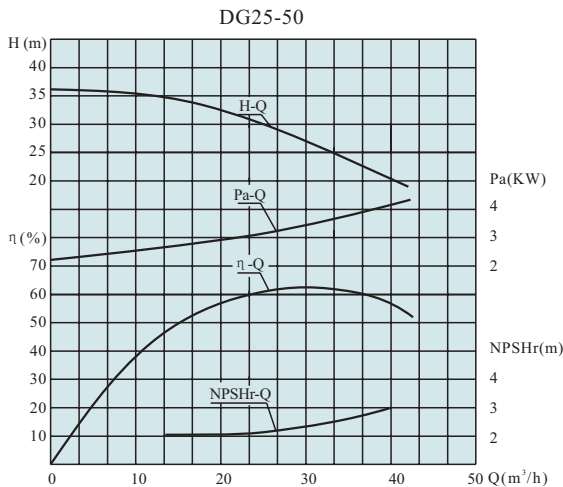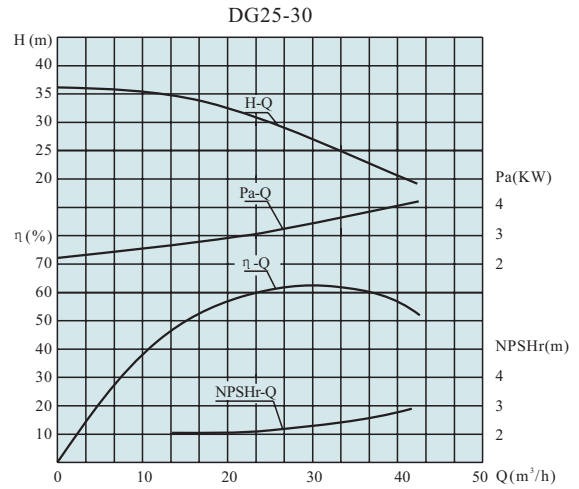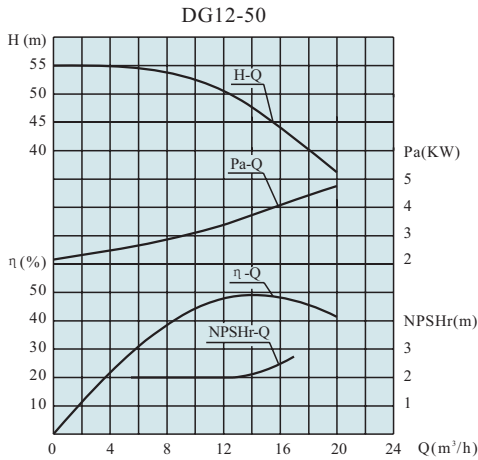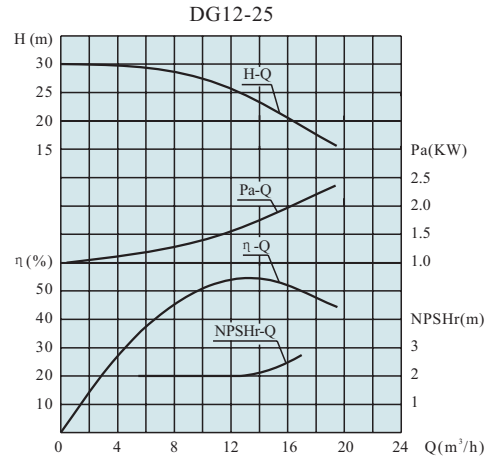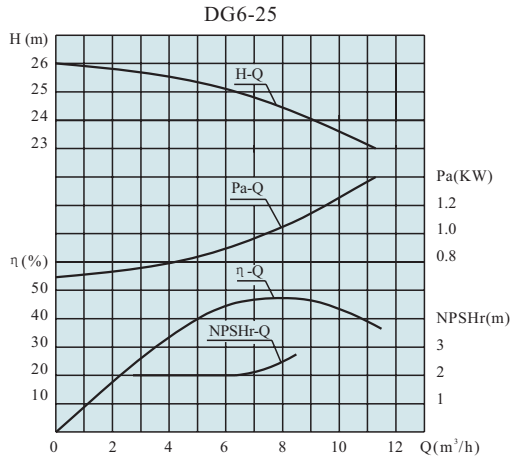






DG型中低压锅炉给水泵性能曲线图

Performance curve figures of DG model middle and low pressure boiler water supply pump

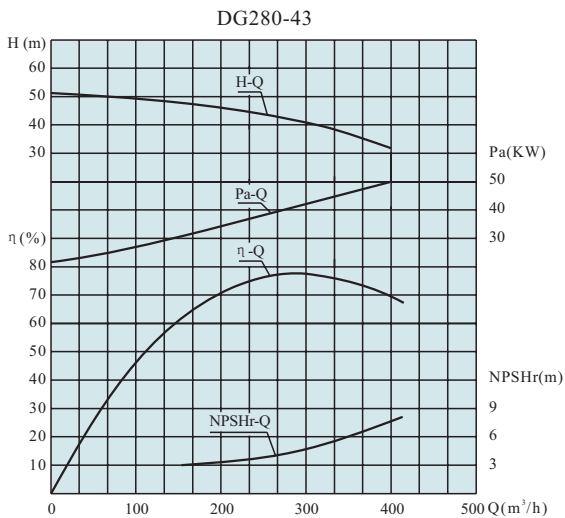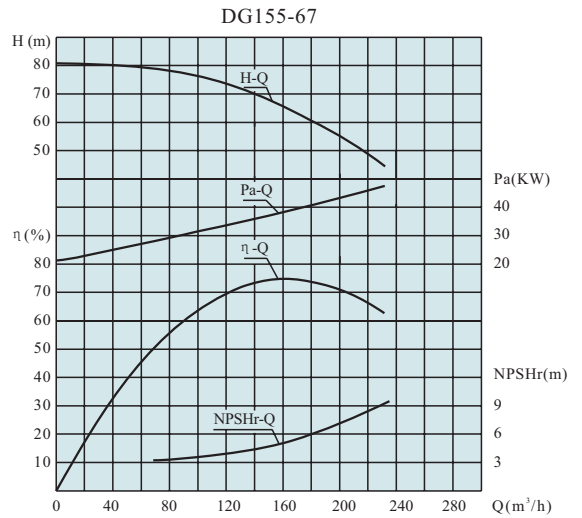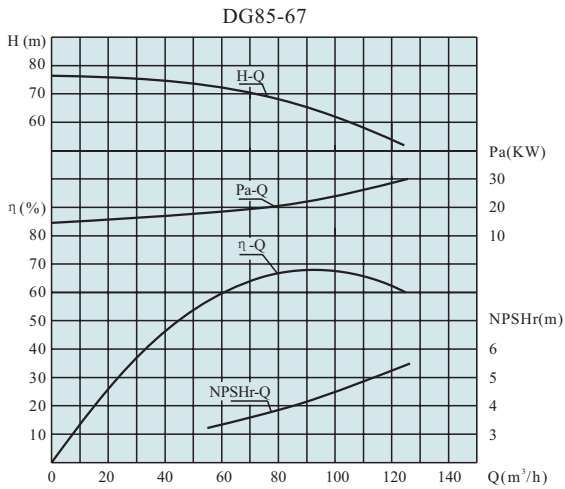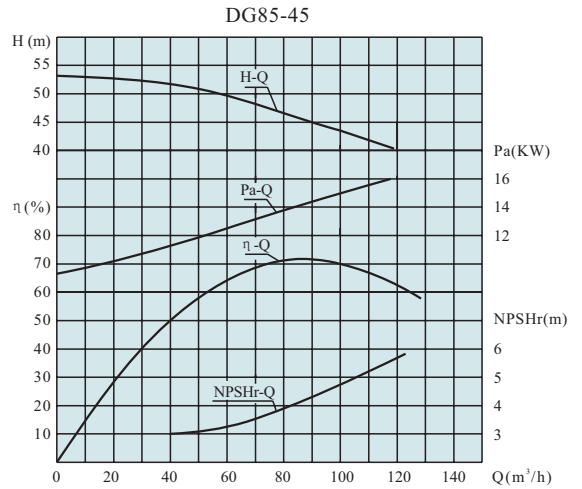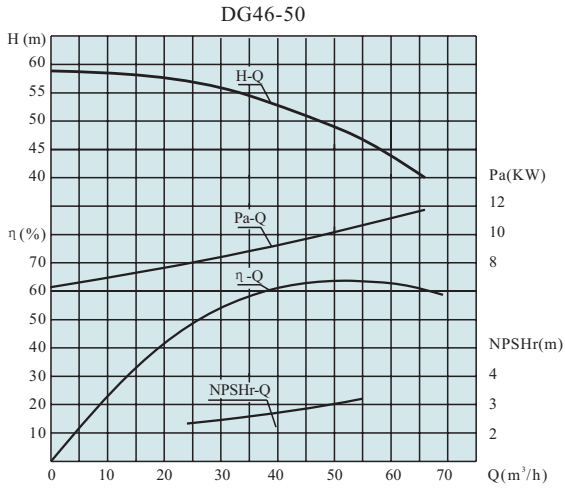

DG型次高压锅炉给水泵性能曲线图

Performance curve figures of DG model hypo-high-pressure boiler water supply pump

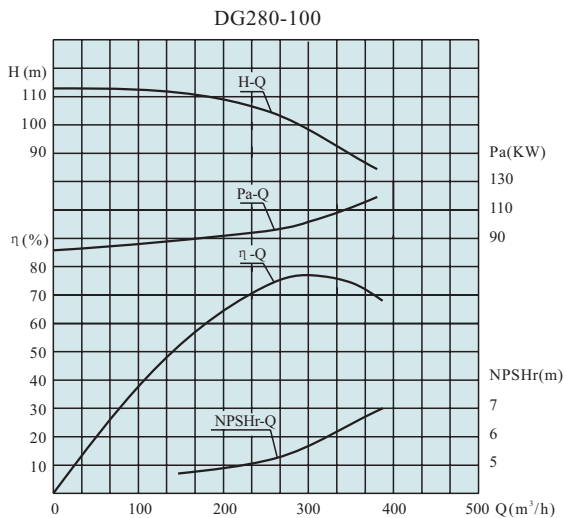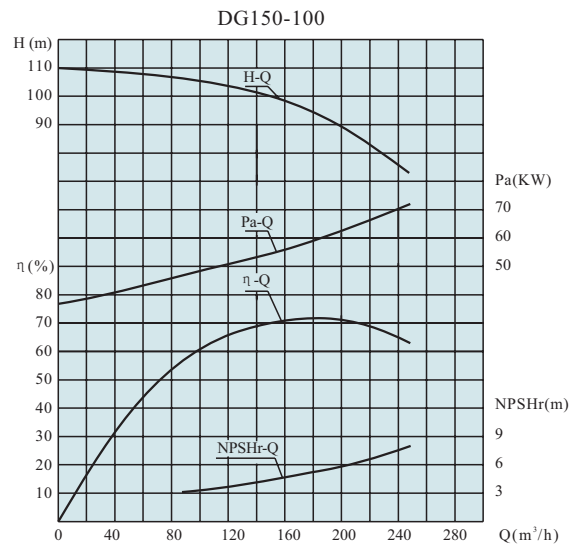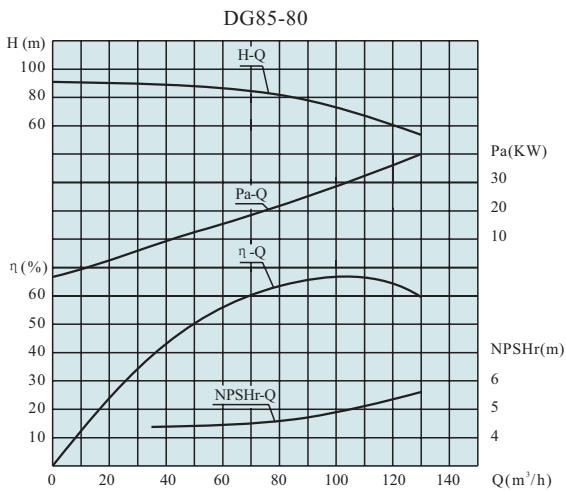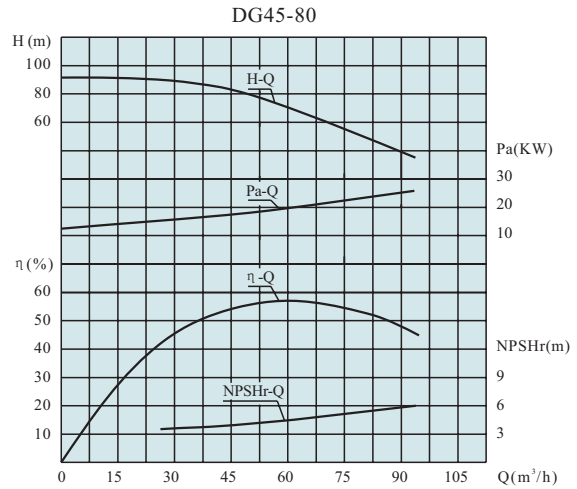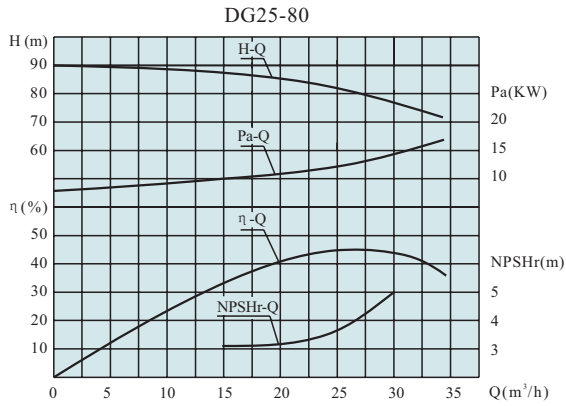

绘出的曲线系一级的性能，级数增加，流量不变，扬程、轴功率均按查得的扬程、轴功率乘级数、2级乘2、3级乘3、依次类推。

The curve shows the performance of No. 1 stage. When the stage number is increased, the flow is kept unchanged, both head and shaft power are those gained from the curves and multiplied by the number of the stage, e.g. multiplied by 2 in case of 2 stages, by 3 in case of 3 stages, and so on and so forth.

泵的装配与检测 Assembly and detection of pump

本型泵装配质量的好坏对泵的性能及运行稳定性影响特别显著。诸如叶轮出口中心与导叶进口中心的对准, 泵的转子部分与定子部分的各个密封间隙值大小均匀等, 装配时应按图纸的技术要求, 方能保证装配质量。

1、转子部件

以两轴承为支承分别测量叶轮口环, 叶轮挡套(或叶轮后脐子), 平衡挡套和轴套的圆跳动值及平衡盘端面的跳动值应符合转子结合部件图纸(图4)的要求。

The assembly quality of the pump will result in a notable affection to the performance and the running stability of it and can not be guaranteed unless the technical requirements in the drawings are strictly followed in the assembly, such as on the alignment between the centers of the impeller's outlet and the guide vane's inlet, the uniform values of the sealing intervals of both rotor and stator portions etc.

1.Rotor

It takes two bearings as the support and measure the circle jumping values of the oral ring of the impeller, the impeller's baffling sleeve (or rear navel), the balancing baffling sleeve and the muff, respectively, and the jumping value of the balancing disk's end-face, which should conform the requirements in the figure of the jointed parts of rotor (Fig. 4).

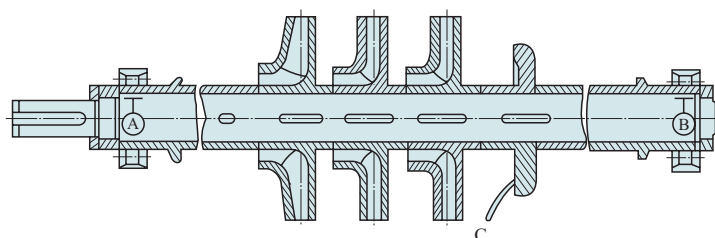


图 4 Fig. 4

泵体密封环与叶轮密封环的名义径向间隙, 按下表:

For the nominal radial intervals of the seal rings of both pump casing and impeller, upon the table below:

名义尺寸(mm) Nominal size (mm)	30~90	>90~120	>120~180	>180~250	>250~500	>500~800	>800~1250	>1250
直径间隙(mm) Diameter interval (mm)	0.3~0.4	0.4~0.5	0.5~0.6	0.6~0.7	0.7~0.85	0.85~1.2	1.2~1.6	1.6~2.0

装配好的转子部件, 各零件的径向跳动允差, 按下表:

For the allowed radial jumping error of each part of the assembled rotor, upon the table below:

部位 Part \ 名义直径 Nominal diameter	≤50	>50~120	>120~260	>260~500	>500~800
叶轮密封环(A-B) Seal ring of impeller (A-B)	0.08	0.10	0.10	0.12	0.15
平衡盘C的端面跳动(A-B) End-face jumping of disk C (A-B)	0.05	0.05	0.06	0.08	0.08

2、定子部件

测量转子轴向串量、平衡环(套)的端面跳动值, 应符合总装图的要求。

1.Stator

Measure the axial serial amount of the rotor and the end-face jumping value of the balancing ring (sleeve), which should conform the requirements in the overall assembly drawing.

3、装配完毕，用手转动转子，检查泵内是否有磨擦声或转动不灵活等不正常现象。

3. At the end of assembly, move the rotor with hand to check if there is frictional sound, non-flexible movement etc. abnormal condition inside of the pump.

泵的安装 Installation of pump

1、泵的安装步骤

泵的安装步骤一般包括把泵放到地基上，找水平、调正和联接泵的管路等。

2、泵安装需要的设备

泵安装时需要下列常规的设备和工具：

- a、有合适负载能力而且安全的起重设备；
- b、每个地脚螺钉处都必须备有一块钢的垫铁或楔铁，作找平底座用；
- c、灌浆的材料必须是不收缩的灌浆料，为了灌浆需准备一个木盒，而且需配有漏斗；
- d、为了安装和拆卸填料，需要一套专用的工具，如带钩的夹具等。

3、泵的搬运

在搬运时要注意安全以防事故发生，搬运时要注意下列事项：

- a、在搬运泵时，起重机的吊钩应挂在底座下面，也可用叉式起重机搬运泵，不允许吊在泵和原动机和螺栓孔或吊泵的轴承体，更不能在泵轴处起吊；
- b、起重负载应均匀平衡，且应注意起重设备的承载能力，起吊时应小心谨慎，防止泵件的碰撞，特别应避免泵联轴器处轴加工配合面的损坏；
- c、严禁异物或灰尘在搬运过程中进入泵和电动机内。

4、泵的开箱检查

泵运到使用单位后应开箱检查泵的零件是否丢失，是否在运输过程中有损坏，如果出现丢失或损坏时，应立即向运输部门和泵制造厂声明。

5、暂时库存

如果泵需要在安装以前库存一段时间，泵仍然需要包装，而且应放在干燥、防雨、防灰尘的合适的地面上，泵的吐出口和吸入口应盖住，以防异物进入。泵的轴、轴承和其它精加工的零件应注意防潮，应涂保护油层。

6、泵的基础

6.1 泵的基础必须具有足够强度和尺寸的混凝土

1. Installation steps

Generally covering the placement of the pump on the foundation, leveling, adjustment and connection of the pump's pipeline.

2. Facilities necessary for installation

The following common facilities and tools are required in installation:

- a. Safe lifters available with a proper loading capacity.
- b. Set a steel horn or wedge horn on every foot screw for leveling foundation.
- c. The grouting material must be a non-shrinking one and it is necessary to prepare a wood case for grouting, which has to be fitted with a hopper.
- d. To mount and remove the packing, a set of special tools is required, such as the clamp with hooks.

3. Pump transportation

When to transport the pump, take care of safety to prevent any accident from occurring and the following cautions:

- a. Place the hook of the lifter under the foundation or use a folk lifter, do not lift it with the hook in the pump, the prime mover and bolt holes or on the bearing, furthermore, on the pump shaft.
- b. Make the lifted load even and balanced, take care about the lifting capacity and not to let the pump parts collided with each other, especially the processed fitting-surface of the shaft on the pump clutch, not to let it damaged.
- c. Prohibited foreign matters or dust from getting into both pump and motor during transportation.

4. Unpacking and check of pump

Unpack and check, when the pump arrives, if any part is lost and if there is any damage, report it to the transporter and the pump manufacturer at once if any.

5. Temporary storage

If the pump is to be stored for a period of time before installation, pack it and place it on a dry, rain-proof and dust-proof ground with both spitting and suck-in mouths covered to prevent foreign matters in. Pay attention not to let the shaft, bearing and other precisely processed parts of the pump getting wet and coat them with a protective oil layer.

6. Basis for the pump

6.1 The basis should be a concrete one of sufficient

基，基础的质量约等于机组质量3~5倍，泵的基就比泵的底座长出50~70mm，且要留出脚孔(为脚螺栓3~4倍的钢管直径)；

6.2 打基包括如下内容：基的脚螺栓钉孔的定位，灌浆和留出联接管路位置，然后在其余空间灌浆；

6.3 基的表面可以是粗糙的，以使灌浆效果好；

6.4 基完全固化再安装设备。

7、搬放和找水平

7.1 在底座下面放置钢的垫铁和楔铁或调整垫，一般都放置在脚螺栓处，如果底座较长，在两脚螺栓中间可放置一块垫铁；

7.2 检查底座下面的基，清洗灰尘、油和其它杂物；

7.3 起重吊钩底座的四个角上，把底座吊在基上方，慢慢把底座放在每个螺栓孔的位置上(对脚螺孔的位置)；

7.4 用一个刀口平尺和机械水平仪放到泵和电机底脚加工平面上，用调整楔铁或调整垫的厚度来确定底座在各个方位上的水平，推荐每100mm长不平整度小于0.25mm，这时脚螺栓的螺母拧到适当的程度(不能过紧)，楔铁或调整垫片应紧固；

7.5 底座找平，而且和基配合较紧后再灌浆。

8、底座的灌浆

8.1 灌浆时，确保做到每个空间的空气必须全部排出；

8.2 当灌浆材料固化后，拧紧脚螺栓的螺母，然后再对灌浆材料涂油漆防潮；

8.3 灌浆后，进行泵和电动机的调正工作。

9、设备的调整

设备调正包括角度调正和中心线位置的调正，至少应在下面三个时期检查设备，进行调正：

第一次，泵和底座已经紧固，但电动机没紧固；

第二次，泵和电动机已紧固，但吸入和吐出管路法兰的螺栓没紧固；

第三次，在泵运转24小时后，再检查一次，检查后把泵和电动机最后紧固。

在调正工作中应注意以下事宜：

a、在调正以前，检查全部的管线，保证它们不对泵座产生作用或力矩；

strength and size, with the mass of it 3~5 times that of the unit one, and 50~70mm longer than that of the pump foundation, plus the foot bolt holes (a steel pipe's diameter 3~4 times that of the foot bolt).

6.2 The job to set the basis covers: locating the foot bolt hole, grouting and leave the place for the pipeline connection, then grouting into the other space.

6.3 The rougher the surface of the basis, the better the grouting effect.

6.4 Do not install any equipment until the basis gets completely solidified.

7.Movement, placement and leveling

7.1 Place steel and wedge horns or regulating iron at the foot bolts under the pump foundation, in general, place a horn in between two bolts in case of a longer foundation.

7.2 Check the basis under the pump foundation and clear dust, oil and other foreign matters.

7.3 Place lifting hooks on the four corners of the foundation to lift it above the basis and then slowly put it on the position with the bolt holes aligned.

7.4 Place a knife edge flat ruler and a mechanical leveler under the processed planes of both pump and motor's foundations and use the thickness of a regulating wedge iron or pad to decide the levelness of the foundation on every respect, for which, non-flatness less than 0.25mm per 100mm is recommended. Then tighten the nut of the foot bolt to a proper extent (not over-tightened) and secure the wedge iron or regulating pad.

7.5 Level the foundation, do not grout until it is more closely fitted with the basis.

8.Grout the foundation

8.1 Make sure the air inside of each space is completely exhausted when to grout.

8.2 Tighten the nut of the foot bolt when the grouted material is solidified and then coat the material with paint for wet resisting.

8.3 After grouting, adjust both pump and motor.

9.Adjustment of equipments

Covering angle and central line position adjustment. check the equipments at least in the following three periods and take adjustment:

The first time, both pump and foundation are secured while the motor is not.

The second time, both pump and motor are secured while the bolts on the suck-in and spitting pipeline flanges are not.

The third time is in 24 hours after the pump starts running, then secure both pump and motor.

Pay attention to the following cautions in the adjustment:

a.Before adjusting, check all pipelines to make sure they will not produce any action or moment on the pump foundation.

b、在调正泵和电动机时，垫片应垫在电动机的下面。
 角度调正是保证联轴器的两个平行度，用一块千分表去检查联轴器法兰端面上四点，千分表读数为0.02~0.03，检查其平行度也可用塞尺，两联轴器平面间的差值(a-b)≤0.06(见图5)。
 中心线对中是指泵和电机轴中心线的对正程度，应使c≤0.08(见图5)。

b.Put the pad under the motor while to adjust both pump and motor.
 Angle adjustment is to guarantee the parallelism of the two planes of the clutches. Use a dial gauge to check four points on the end-face of the clutch flange, the reading on the gauge is 0.02~0.03, and use a feeler to check the parallelism, the difference (a-b) between the two planes is ≤0.06 (see Fig. 5).
 Central line alignment means the aligned degree between the central lines of both pump and motor's shafts, c should be ≤0.08 (see Fig. 5)

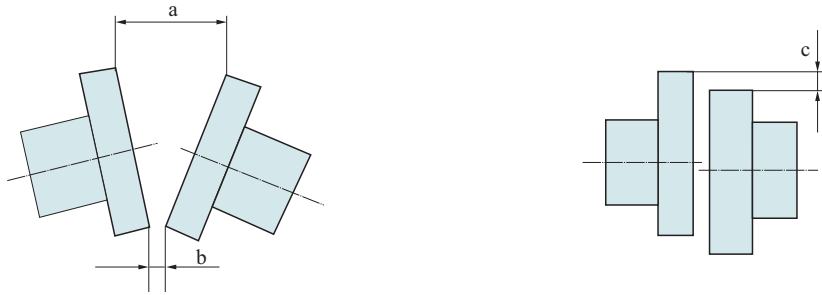


图5 fig5

10、主要管路的联接

泵灌浆且紧固在基上以后，在不受外力条件下对正并联接泵法兰和管路的法兰，这个对正联接不能依靠法兰螺栓的力。
 对管路支撑(附加)应避免管路系统的振动，应减少对管路系统进行清洗。

安装管路，应注意事项：

- a、使用管路的规格和长度应适合，且有足够的承压能力，尽量减少管路的转弯和附件；
- b、泵的吸入管路应是短而直，管路直径应大于或等于泵的入口的直径，泵的吸入管路的弯曲半径应做的尽量大。

11、附加设备的联接

11.1 压力表

在吸入管路和吐出管路上用的压力表必须是质量好性能合格的仪表。吐出压力表最好装配在泵和主管路的吐出法兰2倍直径长的距离上，不能装在弯管和阀的旁边，以防受不稳定流动的干扰。

11.2 联轴器

泵和电机联轴器联接以前重新检查其对中性；检查

10.Link the main pipelines

After grouting and securing the pump on the basis, align and link the flanges of both pump and pipeline without subject to an external force, i.e. the force from the flange bolt.
 For the pipeline support (additional), it should be able to avoid the pipeline vibration and reduce the cleaning to the pipeline.

Cautions in the installation of the pipeline:

- a.The pipeline used should be of a proper norm and length and a sufficient bearing capacity, reducing both bends and fittings of the pipeline as can as possible.
- b.The suck-in pipeline of the pump should be short and straight, the diameter of it should be equal or more than that of the pump's suction inlet and the bent radius of the suck-in pipeline should be made as big as possible.

11.Link the additional equipments

11.1 Pressure gauge

The pressure gauges used on both suck-in and spitting pipelines must be good quality and certified performance. It is better for the spitting pressure gauge to be mounted at the distance 2 times of the diameter of the spitting flange of both pump and main pipeline while not by both elbow and valve so as to prevent the disturbance from unstable flowing.

11.2 Clutch

Recheck the alignment before linking the clutches of

电动机的转向是否符合要求，泵轴的转向：从联轴器方向看泵为顺时针方向旋转，如果电动机转向不符合泵轴的转向，必须把电动机转向调正。

11.3 轴封

如果需要，在泵转动以前，重新调整轴封或重新装配。

both pump and motor; check if the motor moves in the correct direction, and the pump shaft as well; viewing from the clutch, the pump moves clockwise and adjust it if the motor moves in a direction not in line with the pump's.

11.3 Shaft seal

Readjust or reassemble the shaft seal before the pump starts moving if necessary.

泵的运行 Running of the pump

1、操作注意事项

- 1.1 泵只能允许在规定的参数范围内运转；
- 1.2 泵不允许在吐出阀门关闭或关到很小开度下运转，否则导致泵发热，降低寿命，如果泵是安装在一个并联系统中，每台泵都要在特定的参数下运行以保证泵的流量；
- 1.3 泵不能关闭吸入阀运行，否则使泵发生干转，导致泵零件损坏；
- 1.4 泵输送介质不能含有空气或气体，否则会使泵的流量和扬程不可能准确测出，同时会产生研磨损坏零件；
- 1.5 该型泵不能输送带颗粒的材料，否则会降低泵的效率和零件的寿命；
- 1.6 启泵以前应对泵进行开车前检查。

2、启泵前检查

- 2.1 启泵前，检查全部螺栓、管路及引线的联接是否紧固；
- 2.2 检查全部仪表、阀门及仪器是否正常；
- 2.3 检查油环位置、油位计的油是否正常；
- 2.4 检查电动机的转向是否正确。

3、泵的启动

3.1 泵启动时注意事项

- a、该型泵输送介质温度较高(<160°C)；
- b、启动时观察压力表和开关的指示，以便调整；
- c、泵启动后，不能使吐出阀关闭或接近关闭较长时间，否则会使泵内液体过热。

3.2 启泵步骤

- a、首先进行启动前检查(按前述步骤)；
- b、打开泵的吸入阀和水封水管路的阀；

1.Cautions in operation

- 1.1 The pump is allowed to run within the set parameter range only.
- 1.2 The pump is not allowed to run with the spitting valve closed or closed to a little opening, or it will be caused heated and duration lowered. Each pump is required to run under the special parameters so as to guarantee the flow of it if mounted in a parallel system.
- 1.3 The pump can not run with the suck-in valve closed, or it may be dried moving to cause parts damaged.
- 1.4 The medium the pump transports can not contain air or gas, or both flow and head of the pump may not be accurately measured and, meanwhile, grinding may be produced to damage parts.
- 1.5 This pump is not allowed to transport any material with grains, or both pump efficacy and part duration may be lowered.
- 1.6 Check the pump before starting it.

2.Check before starting the pump

- 2.1 Before starting the pump, check if all the bolts, pipelines and the lead-wires are securely connected.
- 2.2 Check if all the meters, valves and instruments are normal.
- 2.3 Check if the oil ring's position and the oil in the oil leveler are normal.
- 2.4 Check if the motor moves in the correct direction.

3.Start the pump

3.1Cautions therein

- a.The temperature of the medium this pump transports is higher (<160°C).
- b.Look at the indications of both pressure gauge and switch during starting so as to adjust them.
- c.After starting the pump, do not let the spitting valve closed or nearly closed for a longer time, or the liquid inside of the pump may become overheated.

3.2 Steps to start the pump

- a.First do the before-starting check (as abovementioned).
- b.Open the pump's suck-in valve and the water sealed water pipeline's valve.

- c. 关闭吐出管路，使泵内充满液体；
- d. 起动电机，接着打开吐出管路的阀。

4、泵运转检查

泵运转后，应立即按2.2条的程序每隔一定时间检查仪表，以此确定泵的工作是否正常，而且要检查泵的转速，此外，测泵的流量、扬程、温度及润滑状况。泵在发生故障时，应停泵，且参照故障排 表进行维修。

5、停泵

- 5.1 将泵的吐出阀关到最小流量，但决不允许关闭泵的吸入阀；
- 5.2 关闭电动机；
- 5.3 关闭泵的吐出阀；
- 5.4 当泵停稳后再关闭泵的吸入阀。

- c. Close the spitting pipeline to have inside of the pump full of liquid.

- d. Start the motor and then open the valve on the spitting pipeline.

4. Check of the pump movement

After the pump starts moving, check the meters every certain time upon the procedure in 2.2 to see if it works normally and the rotating speed of it. In addition, check the flow, head, temperature and lubrication of it. In case of a failure, stop it and repair it by referring the table of troubleshooting.

5. Stop the pump

- 5.1 Close the pump's spitting valve to the smallest flow, but do not close the pump's suck-in valve.

- 5.2 Turn off the motor.

- 5.3 Close the pump's spitting valve.

- 5.4 Then close the sick-in valve when the pump stops stably.

泵的维修 Repair of pump

1、概述

为了保持泵高效稳定的工作状况，泵必须经常维修，维修的项目和每次维修间隔时间取决泵的工作条件和泵的运行状况。

2、泵的维护

定期检查泵的性能(如流量、扬程、振动等)而且做好记录，按这些记录数据去分析泵是否工作正常，是否需要维修，或确定要修的哪一个部位。

在一般条件下，如果坚持精确 测试、记录、定期的总结记录，那么每隔几个月就可以得到泵是否需要维修的可靠资料。

在规定时间内对泵 测之外，下面的维护是经常的：

- a. 检查泵底座、泵、电动机是否紧固，如果松动会引起泵的振动；
- b. 检查仪表、引线的状况；检查管路是否泄漏或松动，或其它形式的损坏，如果需要维修应立即检修；
- c. 填料压盖不能压的过紧，否则会影响填料的寿命；
- d. 轴承润滑油每工作1000小时更换一次。

1. General

To keep the pump in a high effective and stable work, it must be often repaired, the items of repair and the interval between every repair depend on the working condition and running state of it.

2. Maintenance of pump

Hold a periodic check of the pump's performance (as the flow, head, vibration etc.) And make a record, then analyze the pump upon these recorded data to see if it works normally, needs repairing or decide which portion needs repairing.

In general conditions, reliable information whether the pump needs repairing can be gained every several months provided that insistent and accurate tests and records as well as periodic summarizing of the records have been made.

In addition to the monitor of the pump at the set time, the followings need to be maintained often:

- a. Check if the pump, foundation and motor are secured, causing the pump vibrated if loose.
- b. Check the meters and leading-wires' state; check if the pipeline leaks or loosens or gets damaged in any other forms, repair it at once if necessary.
- c. Do not let the packing gland pressed too tightly, or the duration of it may be affected.
- d. Replace the lubricating oil on the bearings every 1000h of work.

故障原因及解决方法 Failures and troubleshooting of pump

故障 Failure	原因 Causes	解决方法 Troubleshooting
1、水泵不吸入，压力表及真空表的指针剧烈跳动 Pump not suck in, pointers of pressure gauge and vacuum meter severely jumping	注入水泵的水不够，进水管与仪表等处漏气 Water injected into the pump insufficient, air leaks from water inlet pipe, meters etc.	再往水泵内注水，拧紧堵塞漏气处 Inject water into pump, tighten the leaking places
2、水泵不吸水，真空表显示高度真空 Pump not suck water, high vacuum shown on vacuum meter	底阀没有打开或已淤塞，吸水管阻力太大，吸入高度太大 Foot valve not opened or blocked up, too big resistance with water sucking pipe, too high suck-in height	校正或更改底阀，清洗或更换吸水管，降低吸水高度 Correct or replace foot valve, clean or replace water sucking pipe, lower the height
3、看压力表水泵出口处是有压力而水泵不出水 Pressure available at pump outlet viewing from pressure gauge while no water out of pump	出水管阻力太大，旋转方向不对，叶轮淤塞，或损坏水泵，转数不够 Too big resistance with water outlet pipe, wrong rotating direction, impeller blocked up, or pump damaged, insufficient r.p.m.	检查或缩短水管及检查电机取下水管接头，清洗或更换叶轮提高转数 Check or shorten outlet pipe, check motor, remove the pipe union, clean or replace impeller, raise r.p.m.
4、流量不足 Insufficient flow	水泵淤塞，密封环磨擦过多，转数不足 Pump blocked up, too much friction with seal ring, insufficient r.p.m.	清洗水泵及管子更换密封环提高转数 Clean pump and pipe, replace seal ring, raise r.p.m.
5、水泵消耗的功率过大 Too big power the pump consumes	填料压盖压得过紧，填料室发热，叶轮磨损，水泵供水量增加 Too tightly pressed packing gland, packing room heated, impeller worn out, water supply quantity of the pump increases	拧松填料压盖或更换填料，更换叶轮，增加出水管阻力来减少流量 Loosen packing gland or replace packing, replace impeller, increase resistance with outlet pipe to reduce the flow
6、水泵内部声音反常，水泵不上水 Abnormal sound inside of pump, no water into pump	流量太大，吸水管内阻力太大，吸水高度过大，在吸水处有空气渗入，所输送液体温度过高 Too big flow, too big resistance inside of water sucking pipe, too high water-sucking height, air gets in the water-sucking place, too high temperature of the liquid being transported	增加出水管内的阻力以减低流量，检查吸水管和底阀，减少吸水高度，拧紧堵塞漏气处 Increase the resistance inside of water outlet pipe to reduce the flow, check water-sucking pipe and foot valve, lower the height, tighten the air leaking places
7、水泵振动 Pump vibrates	泵轴与电机轴线不在同一条中心线上，脏物或水浸入轴承 Axes of pump and motor not on one central line, dirt or water gets into the bearing	把水泵和电机的轴中心线对准，清洗轴承更换润滑脂 Align the two central lines, clean bearing, replace lubricating grease
8、轴承过热 Bearing overheated	润滑脂干固或脏了，水泵轴与电机轴不在同一条中心线上 Lubricating grease dried or dirty, axes of pump and motor not on one central line	检查或清洗轴承体更换润滑脂把轴中心对正 Check or clean bearing, replace lubricating grease, align the central lines
9、平衡水中断，平衡室发热，电机功率增加 Balancing water stops, balancing room heated, motor's power increased	水泵在大流量低扬程运转，平衡盘与平衡板产生研磨 Pump runs under a big flow and low head, grinding occurs between balancing disk and board	关小出口阀至设计工况运转，拆卸平衡盘进行检修 Close outlet valve to the designed working condition, remove balancing disk for repairing

4、泵的拆卸

4.1 当拆卸泵时应注意下列事项：

- a、按5条停泵程序停泵；
- b、将泵壳内的液体放掉(如有冷却水套时也应放掉水)；
- c、如果轴承部件是稀油润滑时应将润滑油放掉；
- d、拆去妨碍拆卸的附属管路，如平衡管、水封水管等管路相引线；
- e、应用加热的方法拆卸联轴器(当需要拆卸电机联轴器时亦应如此)。

4.2 拆卸顺序

泵的拆卸步骤应从吐出侧的轴承部件开始，其顺序大体如下：

- a、拧下吐出侧轴承压盖上的螺栓和吐出段、填料函体、轴承体三个之间的联接螺母，卸下轴承部件；
- b、拧下轴上的圆螺母，依次卸下轴承内圈，轴承压盖和挡套后，卸下吐出段(包括填料压盖、填料环、填料等在内)；
- c、依次卸下轴上的O型密封圈、轴套、平衡盘和键后，卸下吐出段(包括末级导叶、平衡板等在内)；
- d、卸下末级叶轮和键后，卸下中段(包括导叶在内)，按同样方法继续卸下其余各级的叶轮、中段和导叶，直至卸下首级叶轮为止；
- e、拧下吸入段和轴承体的联接螺母和拧下轴承压盖上的螺栓后，卸下轴承部件(在这之前应预先将泵联轴器卸下)；
- f、将轴从吸入段中抽出，拧下轴上固定螺母，依次将轴承内圈、O型密封圈、轴套、挡套等卸下。

至此拆卸工作基本完成，但在上述拆卸过程中，还有部份零件互相是联接在一起的，一般情况下拧下联接螺母后即可卸下。

5、清洗和检查

- 5.1 用煤油清洗全部的零件，在空气中干燥或用布擦干；
- 5.2 检查全部零件的磨损情况，对不能确保正常运转的零件应更换新的；
- 5.3 检查轴是否有尘或生锈，用千分表检查轴的跳动度(轴的径向跳动值不大于8级精度)；
- 5.4 当密封间隙超过推荐值的最大值50%时，应更换密封元件。

4. Removal of pump

4.1 Cautions in the removal

- a. Stop the pump upon the pump stopping procedure in 5.
- b. Drain the liquid inside of the pump casing out (for the cooling water sleeve too if it is available).
- c. Drain out the thinned oil if it is used for lubricating the bearings.
- d. Remove the additional pipelines obstructing the removal, such as the balancing pipe, water sealed water pipe etc.
- e. Remove the clutches by way of heating (for the motor's clutch too if necessary to remove it).

4.2 Sequence of removal

Start the pump removal from the bearing on the spitting side, the sequence comes as below:


- a. Screw out the bolts on the bearing gland on the spitting side and the linking nuts between the spitting section, packing and bearing to remove the bearing.
- b. Screw out the circular nut on the shaft, then in turn remove the inner ring of the bearing, gland and baffling sleeve, then the spitting section (including the packing gland, packing ring, packing etc.).
- c. Remove the O-seal ring, muff, balancing disk and key on the shaft in turn, then the spitting section (including the guide vane on the last stage, balancing board etc.).
- d. After removing the last-stage impeller and key, remove the middle section (including the guide vane), then the impeller, middle section, guide vane on the rest stages in the same way till the impeller on the first stage.
- e. Screw out the linking nuts between the suck-in section and the bearing and the bolt on the bearing gland to remove the bearing (remove the pump clutch prior to this).
- f. Draw out the shaft from the suck-in section, screw out the fixing nut on it, then remove the inner ring of the bearing, O-seal ring, muff, baffling sleeve etc. in turn).

The removal has then been finished generally. However some parts are still linked together during the removal and can be removed once the linking nuts are screwed out, in general.

5. Clean and check

- 5.1 Clean all the parts with coal oil and let them dried in the air or with a cloth.
- 5.2 Check the worn-out conditions on the all parts and replace those unable to make sure of normal work.
- 5.3 Check if there is dust or rust on the shaft and use a dial gauge to check the non-straightness of it (the radial jumping valve of it not more than the 8-class accuracy).
- 5.4 Replace the sealing element when the sealing interval is over the maximum value of the recommended one by 50%.

泵的外形和安装尺寸 Out-form and installation dimensions of pump

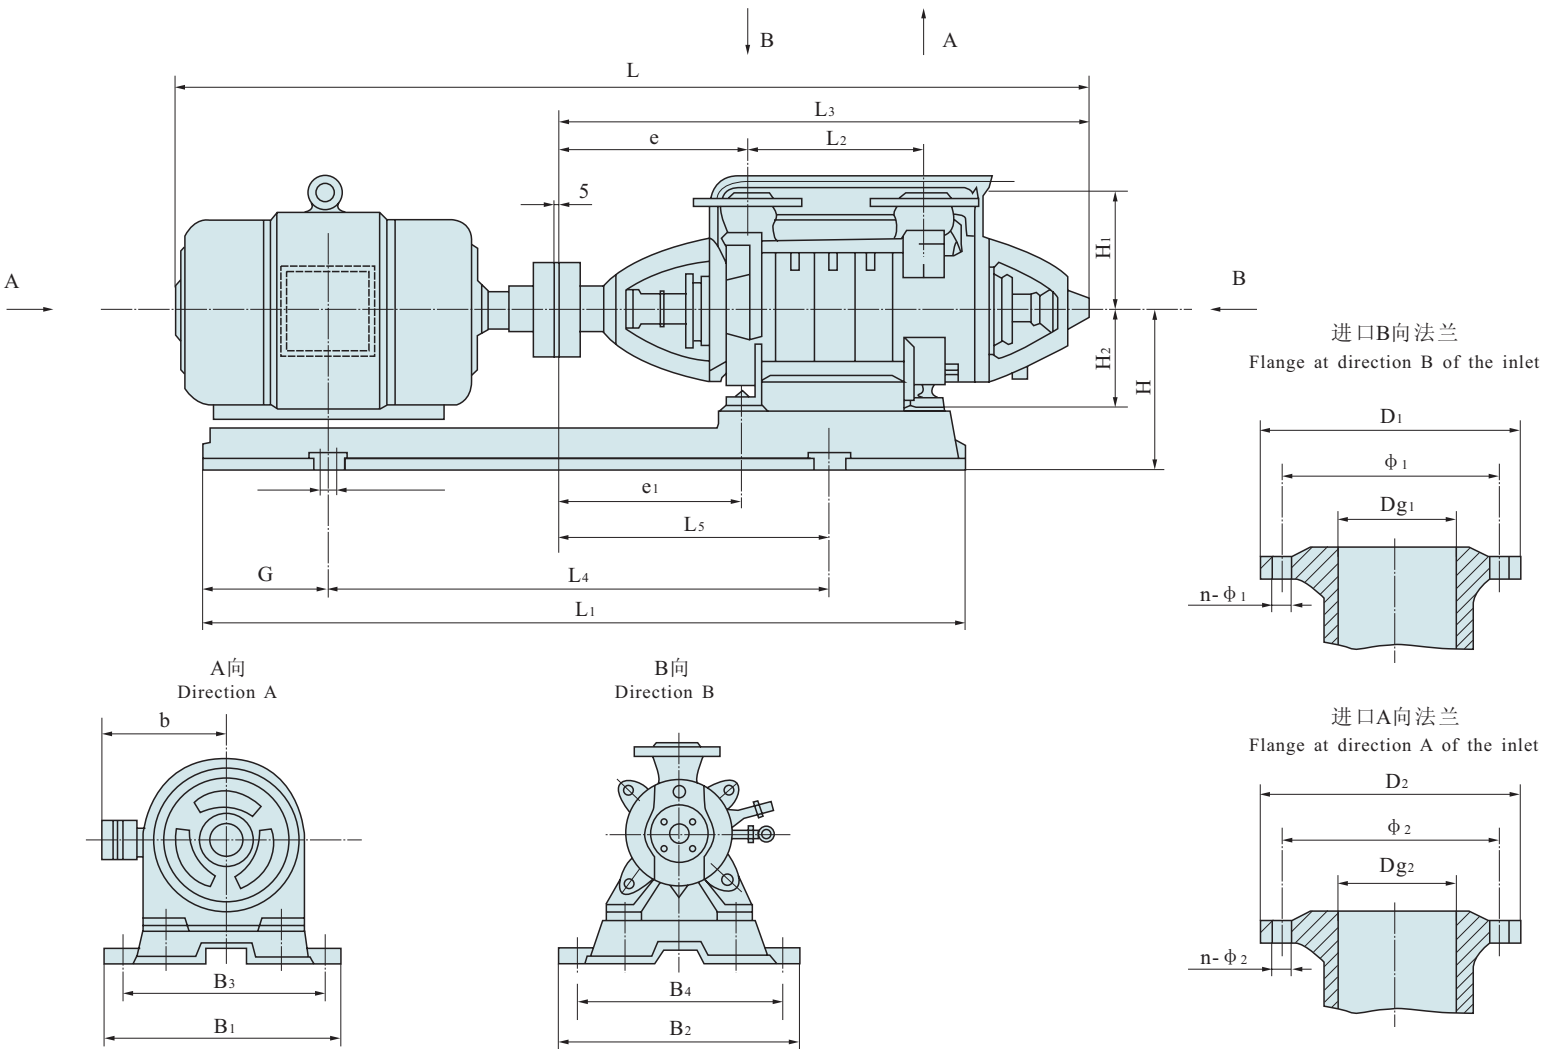


DG型中低压、次高压锅炉给水泵尺寸表 The dimension of model dg middle and low pressure, hypo-high-pressure boiler water supply pump

型号 Model	级数 No. of stage	泵的安装尺寸 Installation dimension of pump(mm)																																														
		L	L ₁	L ₂	L ₃	L ₄	L ₅	e	e ₁	B ₁	B ₂	B ₃	B ₄	b	H	H ₁	H ₂	G	n-d	进口法兰 Flange at inlet				出口法兰 Flange at outlet																								
																				Dg ₁	φ ₁	D ₁	n-φ ₁	Dg ₂	φ ₂	D ₂	n-φ ₂																					
DG6-25	3	1198	885	180	718	600	358	261	266	440	440	390	390	210	230	170	150	176	4-φ25	40	100	130	4-φ13.5	40	110	150	4-φ17.5																					
	4	1248	985	230	768	650	408																																									
	5	1298		280	818																																											
	6	1350	1206	330	868	785	459																																									
	7	1400		380	918																																											
	8	1573	1306	430	968	835	509																																									
	9	1623		480	1018																																											
	10	1673	1500	530	1068	935	584																																									
	11	1723		580	1118																																											
	12	1773	630	1168																																												
	DG12-25	3	1192	965	180	695	645																					355	275	275	420	420	370	370	210	250	170	150	130	4-φ24	50	110	140	4-φ13.5	40	110	150	4-φ17.5
		4	1378	1120	230	745	745																					403			490	410	440	360	255													
5		1428	280		795																																											
6		1478	1215	330	845	820	458	480	410	430	360	235																																				
7		1528		380	895																																											
8		1623	1430	430	945	920	501	530	460	480	410	270																																				
9		1673		480	995																																											
10		1743	1490	530	1045	975	520	530	415	470	365	285	280																																			
11		1793		580	1095																																											
12		1952	1640	630	1145	965	578	550	400	500	350	310	350	230																																		
DG25-30		3	1450	1110	230	845	760	432	330	315	530	460	460	255	250	210	170	165	4-φ30	65	130	160	4-φ17.5	65	145	185	8-φ17.5																					
		4	1560	1219	295	910	850	478																				285			260	180																
	5	1650	1297	360	975	880	510	575																				505	310	280	200																	
	6	1825	1432	425	1040	970	553																																									
	7	1890	1497	490	1105	1000	583	610																				545	345	305	210																	
	8	1955	1562	555	1170	1030	613																																									
	9	2020	1627	620	1235	1080	663	530																				460	285	260	192																	
	10	2120	1728	685	1300	1120	680																																									
	DG46-30	3	1520	1167	230	845	845	487																				330	315	530	460	460	285	260	210	170	192	4-φ30	80	150	190	4-φ18	65	145	185	8-φ18		
		4	1690	1312	295	910	850	443																																							575	505
5		1755	1367	360	975	910	503																																									
6		1820	1432	425	1040	935	528	615	545	345	305	220																																				
7		1925	1532	490	1105	1010	580																																									
8		2105	1694	555	1170	1110	600	664	594	385	330	235																																				
9		2170	1759	620	1235	1140	630																																									
10		2305	1897	685	1300	1245	679	720	650	410	360	250																																				

DG SERIES BOILER WATER SUPPLY PUMP

DG85-67、DG155-67、DG280-43型泵的外形及安装尺寸图 Figure of the out-form and installation dimensions of model DG85-67, DG155-67, DG280-43 pumps

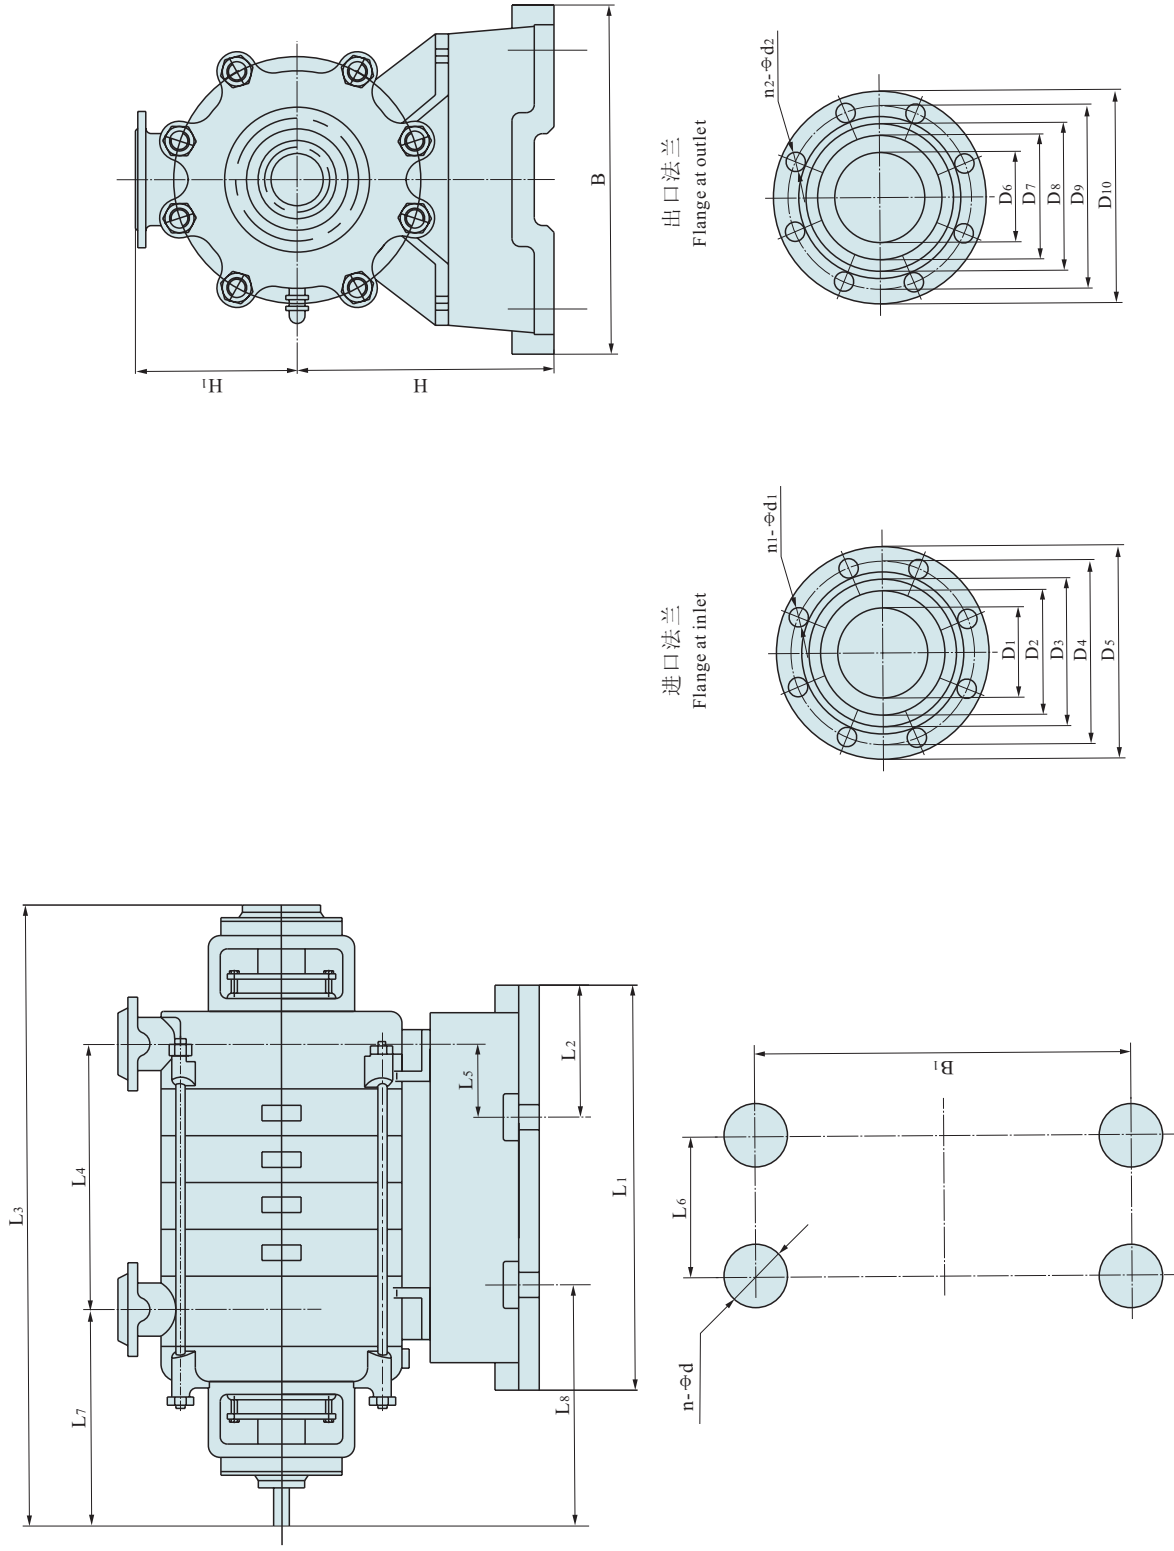


泵型号 Model of pump	级数 No. of stage	尺寸 Dimension													配套电机 Corollary motor														
		L ₁	L ₂	L ₃	L ₄	L ₅	L ₆	L ₇	L ₈	B	B ₁	H	H ₁	D ₁	D ₂	D ₃	D ₄	D ₅	D ₆	D ₇	D ₈	D ₉	D ₁₀	n-φd	n ₁ -φd ₁	n ₂ -φd ₂	型号 Model	功率 Power (kW)	电压 Voltage (V)
DG85-67	3	765	182	1409	371	13	400	557	541	670	600	420	350	100	149	168	200	250	100	149	168	200	250	4-φ30	8-φ24	8-φ24	Y280M-2	90	380
	4	765	182	1497	459	31	400	557	585	670	600	420	350														Y315S-2	110	380
	5	765	182	1585	547	75	400	557	629	670	600	420	350														Y315M-2	132	380
	6	945	182	1673	635	27	580	557	585	670	600	420	350														Y315L1-2	160	380
	7	945	182	1761	723	71	580	557	629	670	600	420	350														Y315L2-2	200	380
	8	1125	182	1849	811	27	760	557	581	670	600	420	350														Y3551-2	220	6000
	9	1125	182	1937	899	71	760	557	625	670	600	420	350														Y3552-2	250	6000
DG155-67	3	765	182	1407	371	13	400	557	541	670	600	420	350	150	203	242	280	345	150	203	242	280	345	4-φ30	8-φ33	8-φ33	Y315M-2	132	380
	4	765	182	1495	459	31	400	557	585	670	600	420	350														Y315L2-2	200	380
	5	765	182	1583	547	75	400	557	629	670	600	420	350														Y3551-2	220	6000
	6	945	182	1671	635	27	580	557	585	670	600	420	350														Y3553-2	280	6000
	7	945	182	1759	723	71	580	557	629	670	600	420	350														Y3555-2	355	6000
	8	1125	182	1847	811	27	760	557	581	670	600	420	350														Y3555-2	355	6000
	9	1125	182	1935	899	71	760	557	625	670	600	420	350														Y4001-2	450	6000
DG280-43	3	605	152.5	1459	509	62.5	300	491	618.5	810	740	450	400	200	265	-	295	341	200	259	282	320	375	4-φ30	12-φ23	12-φ30	Y315L1-4	160	380
	4	865	182.5	1589	639	27.5	500	491	583.5	810	740	450	400														Y315L2-4	200	380
	5	865	182.5	1719	769	92.5	500	491	648.5	810	740	450	400														Y35541-4	250	6000
	6	1125	207.5	1849	899	52.5	710	491	608.5	810	740	450	400														Y3556-4	315	6000
	7	1125	207.5	1979	1029	117.5	710	491	673.5	810	740	450	400														Y4001-4	355	6000
	8	1385	217.5	2109	1159	62.5	950	491	618.5	810	740	450	400														Y4002-4	400	6000
	9	1385	217.5	2239	1289	127.5	950	491	683.5	810	740	450	400														Y4003-4	450	6000

DG85-67、DG155-67、DG280-43型泵的外形及安装尺寸表 Table of the out-form and installation dimensions of model DG85-67, DG155-67, DG280-43 pumps

DG 系列锅炉给水泵

DG SERIES BOILER WATER SUPPLY PUMP


DG25-80、DG45-80型泵外形安装尺寸图 DG25-80、DG45-80 pump installation dimensions

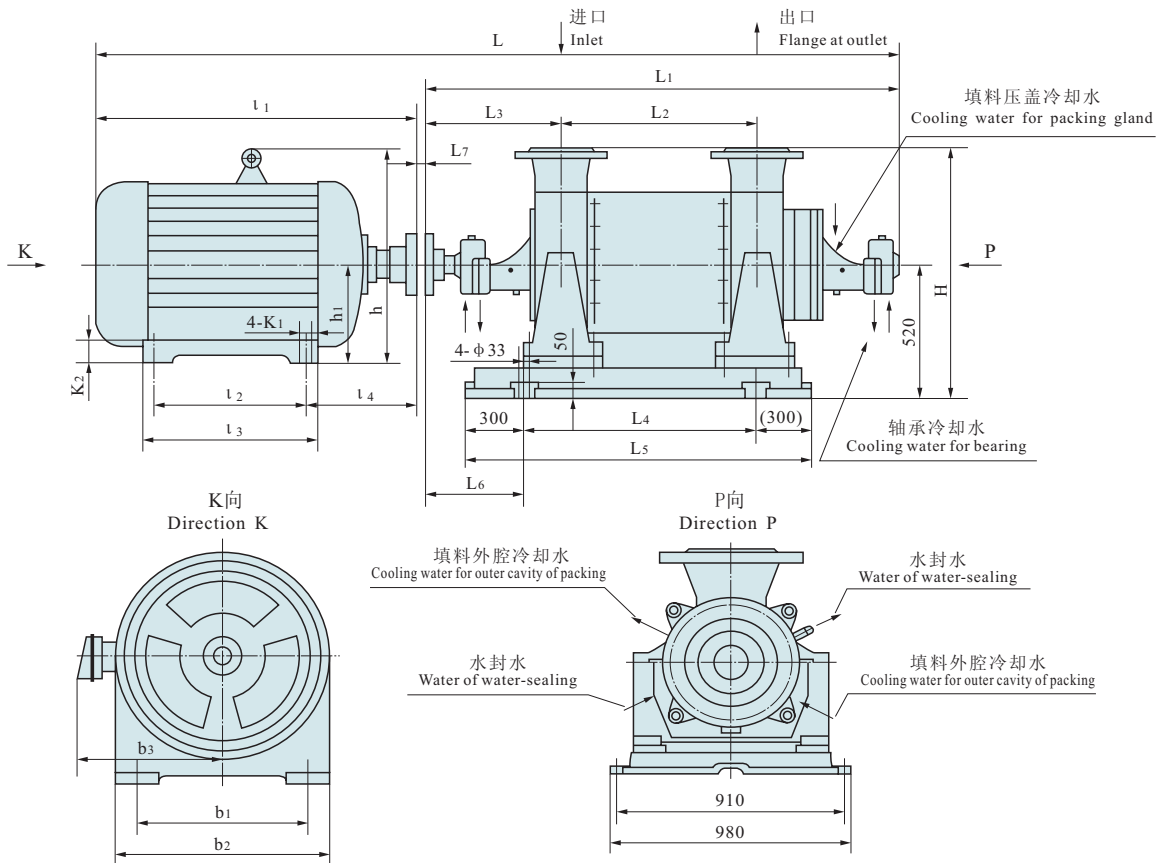

DG25-80、DG45-80安装尺寸表 DG25-80、DG45-80 pump installation dimensions table

泵型号 Model	总长 Total L	泵部分 Pump part								电机部分 Motor part											
		L1	L2	L3	L4	L5	L6	L7	H	l1	l2	l3	l4	b1	b2	b3	h	h1	K1	K2	
DG25-80x5	2378	1388	449	447	432	1032	643	5	880	985	368	535	330	457	550	410	680	280	24	38	
DG25-80x6	2507	1467	528	447	432	1032	643	5	880	1035	419	586	330	457	550	410	680	280	24	38	
DG25-80x7	2736	1546	607	447	432	1032	643	5	880	1185	406	610	356	508	635	530	845	315	28	45	
DG25-80x8	2925	1625	686	447	595	1195	643	5	880	1295	457	660	356	508	635	530	845	315	28	45	
DG25-80x9	3004	1704	765	447	595	1195	643	5	880	1295	457	660	356	508	635	530	845	315	28	45	
DG25-80x10	3083	1783	844	447	827	1427	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG25-80x11	3162	1862	923	447	827	1427	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG25-80x12	3241	1941	1002	447	827	1427	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG45-80x7	2846	1505	615	439	432	1032	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG45-80x8	2925	1574	694	439	595	1195	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG45-80x9	3004	1663	773	439	595	1195	643	5	880	1295	508	740	356	508	635	530	845	315	28	45	
DG45-80x10	3288	1742	852	439	827	1427	643	5	880	1500	560	750	394	610	730	655	1010	355	28	52	
DG45-80x11	3367	1821	931	439	827	1427	643	5	880	1500	630	750	394	610	730	655	1010	355	28	52	
DG45-80x12	3446	1900	1010	439	827	1427	643	5	880	1500	630	750	394	610	730	655	1010	355	28	52	

DG150-100、DG280-100型泵外形安装尺寸图 DG150-100、DG280-100 Installation dimensions

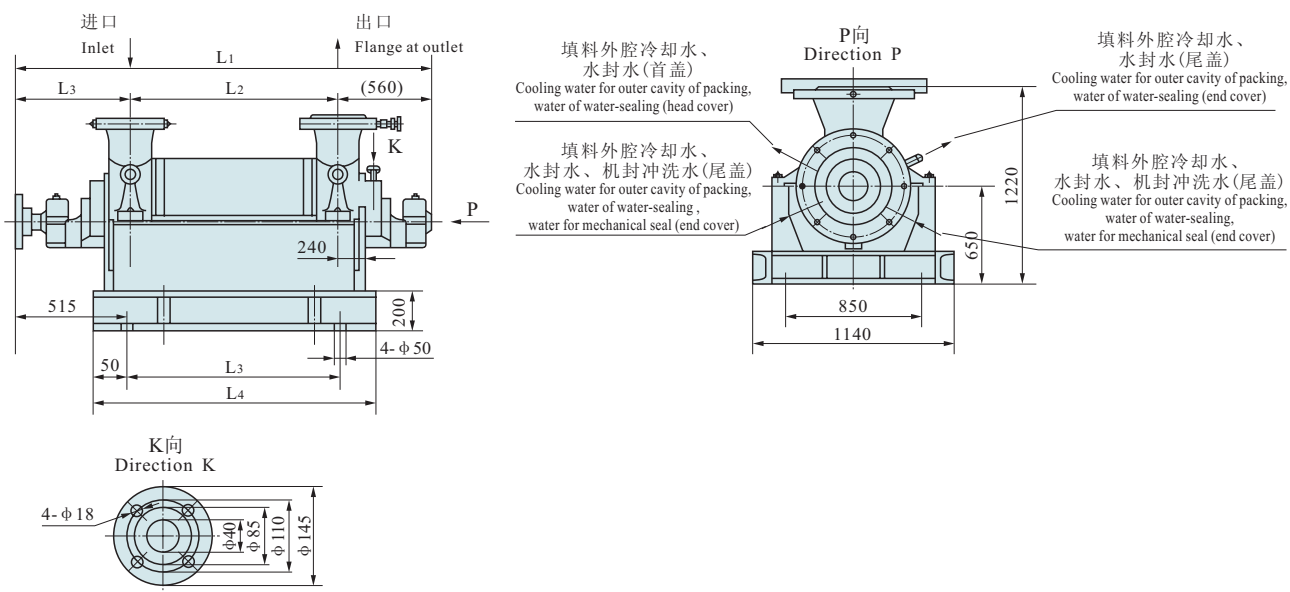


DG150-100、DG280-100型泵安装尺寸表 DG150-100、DG280-100 installation dimensions table

泵型号 Model	L1	L2	L3	L4	L5	L6	H1	H2	B1	B2
DG150-100x6	2052	795	642	1085	1185	507	650	1220	850	1140
DG150-100x7	2157	900		1190	1290					
DG150-100x8	2262	1005		1295	1395					
DG150-100x9	2367	1110		1400	1500					
DG150-100x10	2472	1215		1505	1605					
DG280-100x4	1861	600	663	930	1030	498	585	1085	870	1130
DG280-100x5	1981	720		1050	1150					
DG280-100x6	2101	840		1170	1270					
DG280-100x7	2221	960		1290	1390					
DG280-100x8	2341	1080		1410	1510					
DG280-100x9	2461	1200		1530	1630					
DG280-100x10	2581	1320		1650	1750					


DG SERIES BOILER WATER SUPPLY PUMP

DG85-80型泵外形安装尺寸图 DG85-80 installation dimensions

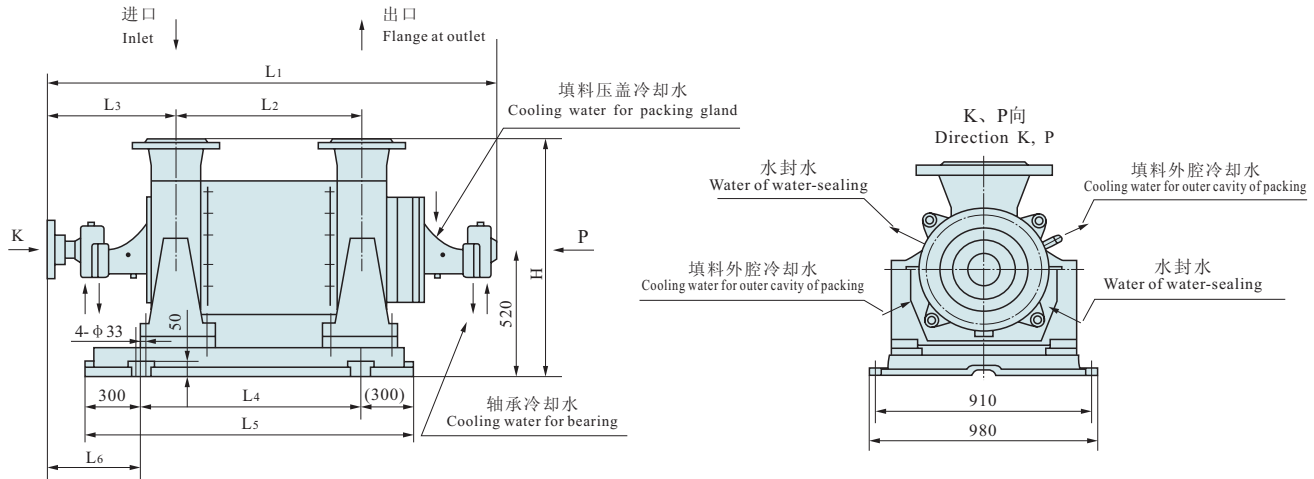

DG85-80型泵外形安装尺寸表 DG85-80 installation dimensions table

泵型号 Model	L1	L2	L3	L4	L5	L6	H1	H2	B1	B2
DG85-80x7	1700	630	543	432	1032	643	520	880	910	980
DG85-80x8	1780	710		595	1195					
DG85-80x9	1860	790		827	1427					
DG85-80x10	1940	870								
DG85-80x11	2020	950								
DG85-80x12	2100	1030								

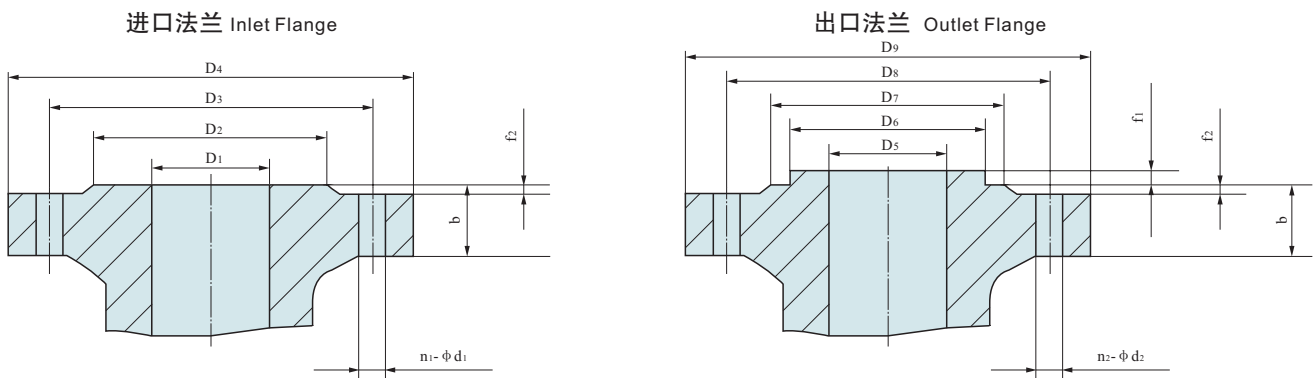

进、出口法兰尺寸图

Figure of the inlet and outlet flange dimensions

法兰尺寸表 Flange dimensions table

泵型号	进口法兰 Inlet Flange							出口法兰 Outlet Flange								
	D1	D2	D3	D4	f2	b	n1-φd1	D5	D6	D7	D8	D9	f1	f2	b	n2-φd2
DG25-80	65	118	145	185	3	20	4-φ18	65	110	138	170	220	4	3	32	8-φ25
DG45-80	80	135	160	195	3	22	8-φ18	65	109	138	170	220	4	3	32	8-φ25
DG85-80	100	155	180	220	3	22	8-φ18	100	149	172	210	265	4	3	38	8-φ30
DG150-100	200	278	310	360	3	36	12-φ25	150	203	250	290	350	4.5	4.5	50.5	12-φ34
DG280-100	200	278	310	360	3	36	12-φ26	150	203	250	290	355	4.5	3	50	12-φ33

DG 型高压锅炉给水泵

DG TYPE HIGH-PRESSURE BOILER WATER FEED PUMP

用 途 Application

DG型高压锅炉给水泵可作为高压锅炉给水或作为其它高压清水泵用。

DG型高压锅炉给水泵使用温度可达170℃。

流量范围：120-1100m³/h

总扬程范围：967-2500m

Type DG high pressure boiler feed pumps are used for feeding high pressure boiler or pumping high pressure clean water.


The temperature of pumped media is not more than 170°C.

Range of capacity:120-1100m³/h

range of total head:967 to 2500m

型号意义 Model meaning

1 DG - 12

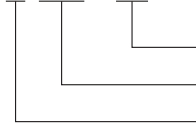

泵级数

多级锅炉给水泵


泵设计序号

Pump stage

Multi-stage boiler pump

Pump design No.

DG 450 - 180



设计点名义扬程除以10

设计点名义流量

多级锅炉给水泵

Design point nominal head divide 10

Design point nominal capacity

Multi-stage boiler pump

结 构 Construction

- 1、DG型高压锅炉给水泵是单壳体节段式多级离心泵，吸入口及吐出口均为垂直向上，用穿杆把中段、吸入及吐出段联接成一体，各段之间的静止密封面靠金属面密封，同时有O型圈为辅助密封。
- 2、DG型泵的轴封采用软填料密封，用冷却水冷却。可根据用户要求采用机械密封。
- 3、泵转子由泵两端的滑动轴承来支承，轴承采用强制润滑，泵本身配带油系统。转子的轴向力用平衡盘平衡，且带有止轴承。用于承受由于工况变化而产生的残余轴向力。在平衡室体和吸入管之间装有回水管。

- 1.The pumps are sectional casing,multi-stage centrifugal pumps. The suction casing, stage casing and discharge casings are rigidly held together by tie bolts. The joints between these casings are primarily sealed by means of metal-metal contact. Simultaneously,O-rings are used as auxiliary seals.
- 2.The shafts of these pumps are sealed by soft-packing and cooling water. Mechanical seal can be used according to the client's requirement.
- 3.The rotating assembly is supported by sliding bearings on both ends of the pump shaft. Bearings of pump are forced-lubricated. The oil system is equipped for type DG pump. The axial thrust of rotor is balanced by balance disc. And the thrust bearing is also provided which is used to bear residual axial force caused by the change of working conditions.

传动 Drive

泵通过弹性联轴器由电动机驱动，也可以根据用户需要配带齿型联轴器，膜片联轴器，液力耦合器。原动机可采用小汽轮机或电动机驱动。

从传动方向看，泵为顺时针方向旋转。

The pump is driven by the motor through the coupling. The gear, membrane coupling and hydraulic coupling can be used according to client's requirements. The pump can be driven by turbine or motor.

The rotating direction of pumps are clockwise when viewed from the driving end.


材料 Material

吸入段、吐出段、导叶、叶轮：碳钢或铬钢。

轴、密封环、导叶套：铬钒钢或铬钢。

Suction casing, discharge casing, diffuser, and impeller: carbon steel or chrome steel shaft, wear ring and diffuser bush: chromic alum steel or chrome steel.


DG型高压锅炉给水泵结构图 Standard construction of type DG pumps

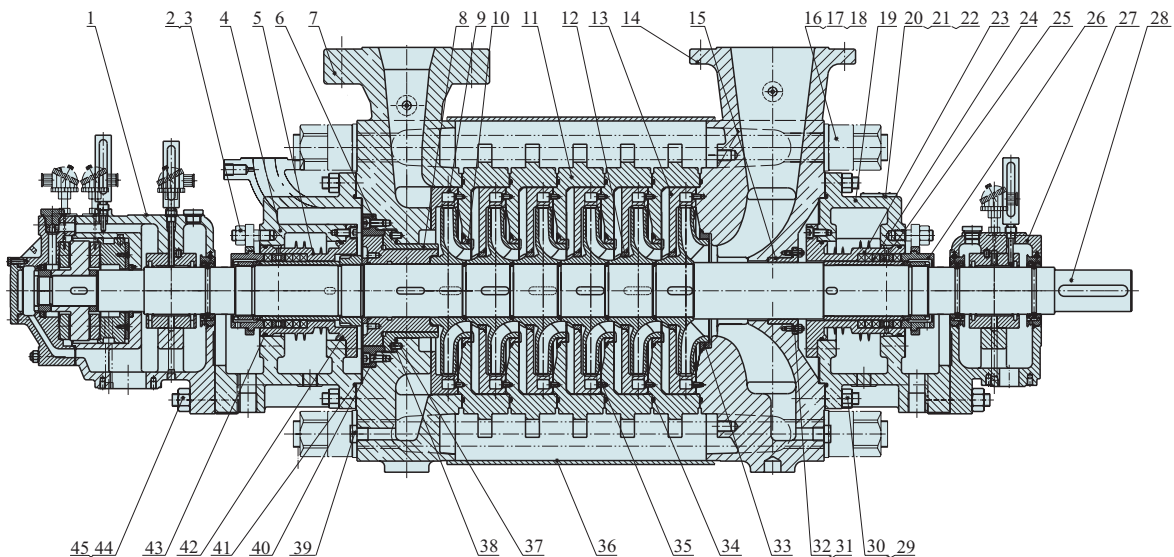


1	后轴承部件 Rear bearing part	13	导叶 Guide vane	25	填料环 Packing ring	37	O型密封圈 O-seal ring
2	螺柱 Stud	14	吸入段 Suck-in section	26	填料压盖部件 Packing gland part	38	销 Pin
3	螺母 Nut	15	进水段衬套 Bush of water inlet section	27	前轴承部件 First bearing part	39	丝堵 Wire-jam
4	尾盖 Tail cover	16	穿杠 Through handspike	28	转子部件 Rotor part	40	螺钉 Screw
5	尾盖衬套 Bush of tail cover	17	螺母 Nut	29	螺柱 Stud	41	O型密封圈 O-seal ring
6	平衡套压环 Press-ring of balancing sleeve	18	垫圈 Washer	30	螺母 Nut	42	O型密封圈 O-seal ring
7	吐出段 Spitting section	19	首盖 Head cover	31	螺柱 Stud	43	O型密封圈 O-seal ring
8	平衡套 Balancing sleeve	20	标牌 Label	32	螺母 Nut	44	螺柱 Stud
9	末段导叶 End-section guide vane	21	转向牌 Rotating direction plate	33	吸入段密封环 Suck-in section seal-ring	45	螺母 Nut
10	中段密封环 Mid-section seal-ring	22	铆钉 Rivet	34	O型密封圈 O-seal ring		
11	中段 Mid-section	23	首盖衬套 Bush of head cover	35	螺钉 Screw		
12	导叶套 Guide vane sleeve	24	填料 Packing	36	泵罩部件 Pump cover part		

性能曲线图 Performance curve figures


DG70-120 12

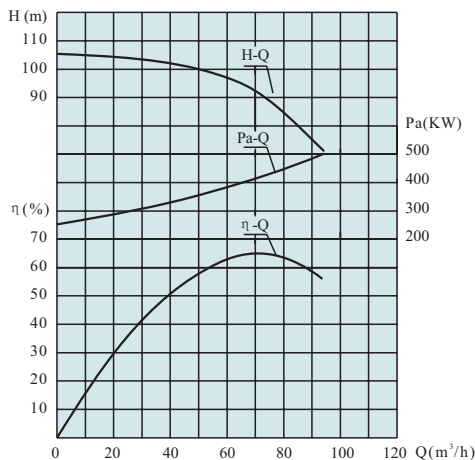


1DG-12

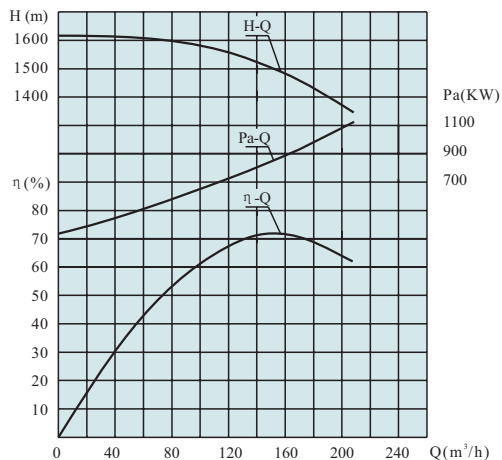

2DG-10

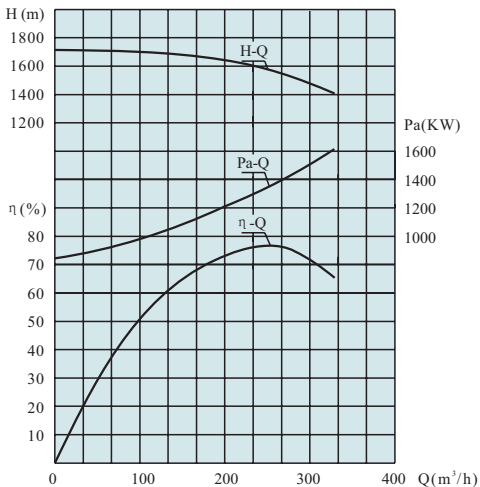


3DG-10

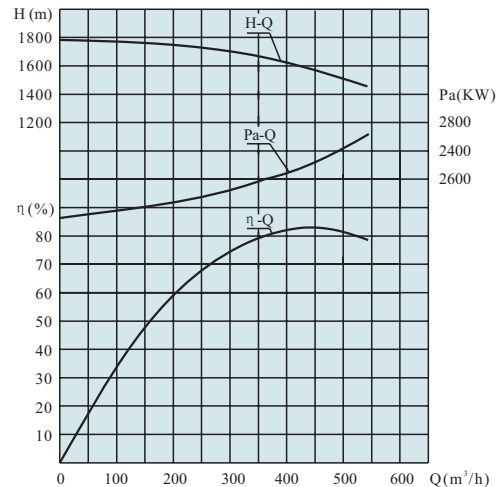


性能曲线图 Performance curve figures


4DG-8C

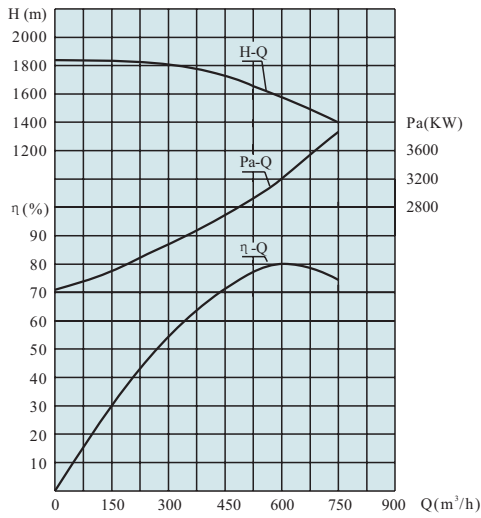


5DG-10

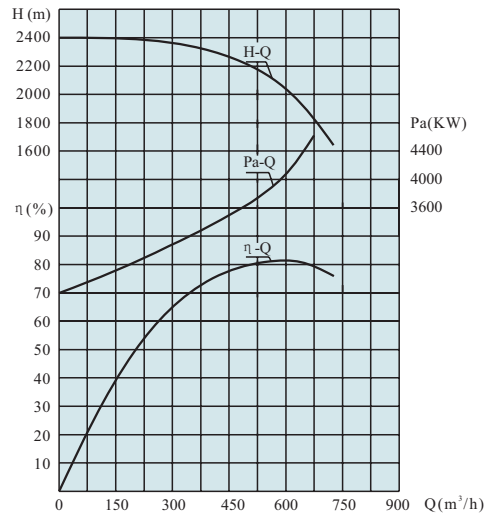





DG270-140B

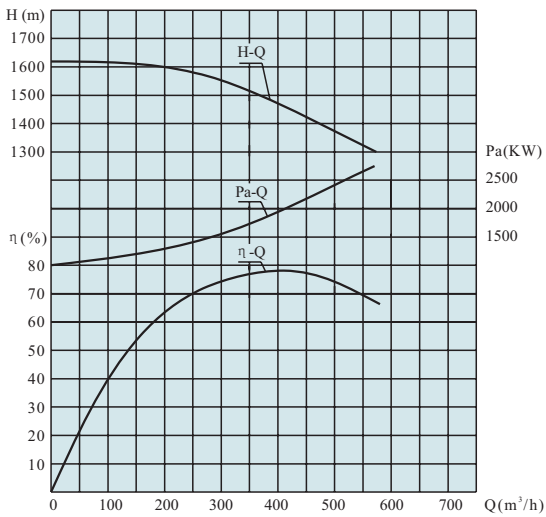




DG270-140C

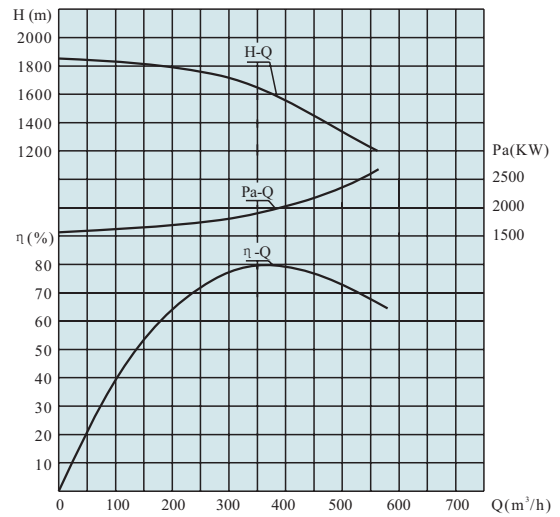

性能曲线图 Performance curve figures

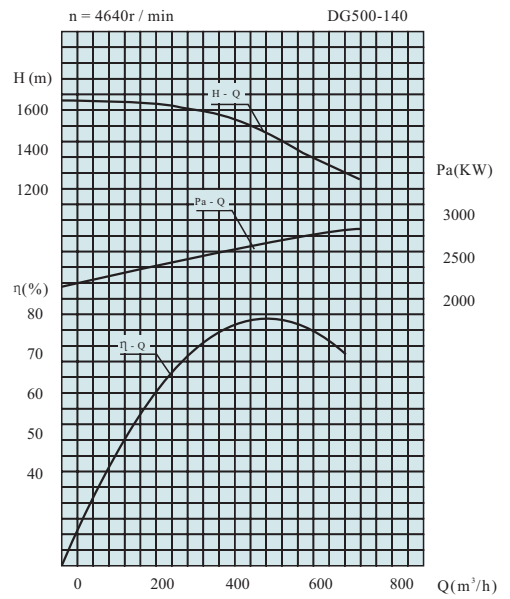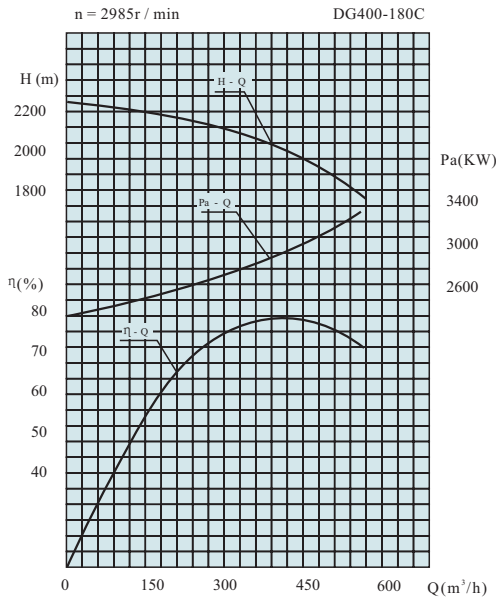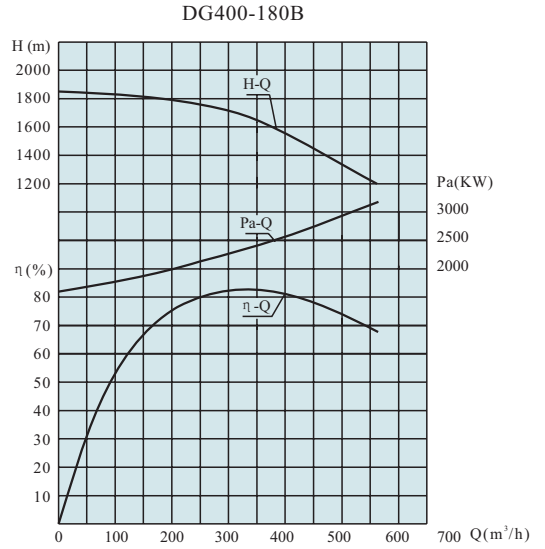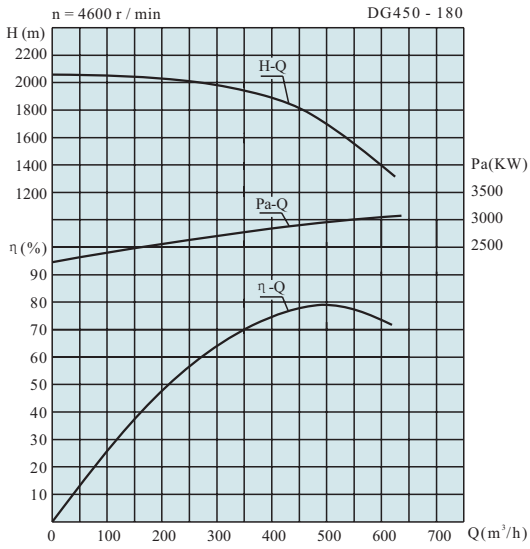

性能曲线图 Performance curve figures

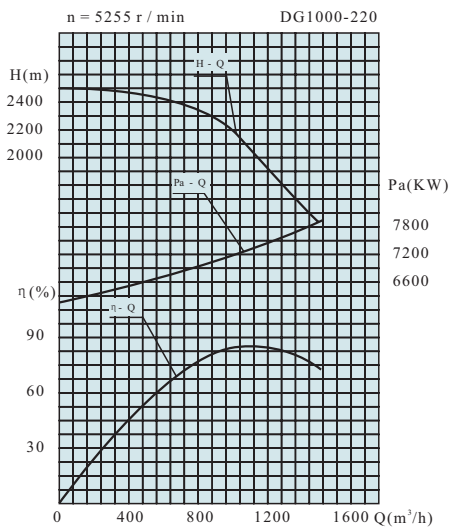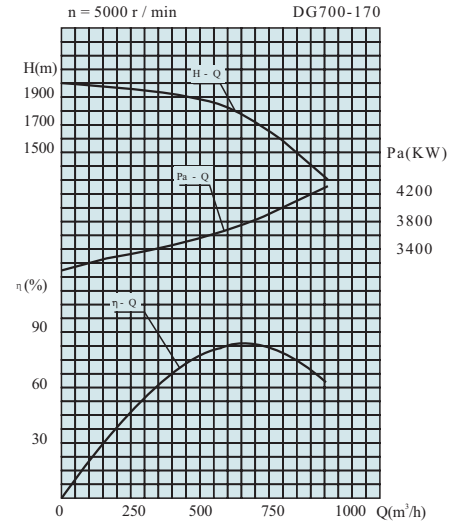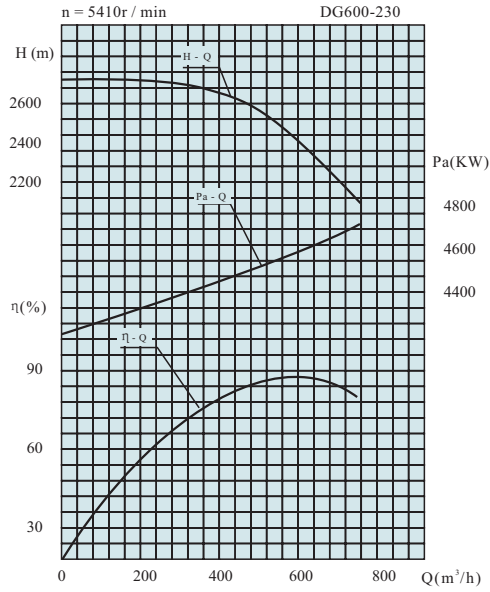

DG型高压锅炉给水泵性能参数 DG type high pressure boiler feed pumps performance

泵型号 Type	流量 Q (m ³ /h)	扬程 H (m)	转速 n (r/min)	轴功率 Pa (kW)	效率 η (%)	必需汽 蚀余量 (NPSH) _r (m)	配套 功率 N (kW)
DG70-120 9	50	1125	2980	268	57	4.5	400
	70	1080		317	65		
	84	973		364	61		
DG70-120 10	50	1250	2980	299	57	4.5	450
	70	1200		352	65		
	84	1080		405	61		
DG70-120 11	50	1375	2980	329	57	4.5	500
	70	1320		387	65		
	84	1188		446	61		
DG70-120 12	50	1500	2980	358	57	4.5	560
	70	1440		422	65		
	84	1300		487	61		
1DG-8	120	1040	2980	500	68	4.5	710
	140	1027		544	75		
	170	967		631	71		
1DG-9	120	1170	2980	563	68	4.5	800
	140	1155		612	72		
	170	1088		710	71		
1DG-10	120	1300	2980	625	68	4.5	800
	140	1283		680	72		
	170	1208		788	71		
1DG-11	120	1430	2980	688	68	4.5	1000
	140	1412		748	72		
	170	1330		867	71		
1DG-12	120	1560	2980	750	68	4.5	1000
	140	1540		816	72		
	170	1450		946	71		
2DG-8	200	1344	2980	990	74	5	1400
	270	1213		1189	75		
	280	1184		1221	74		
2DG-9	200	1512	2980	1114	74	5	1600
	270	1363		1337	75		
	280	1330		1371	74		
2DG-10	200	1680	2980	1237	74	5	1600
	270	1515		1486	75		
	280	1480		1524	74		

泵型号 Type	流量 Q (m ³ /h)	扬程 H (m)	转速 n (r/min)	轴功率 Pa (kW)	效率 η (%)	必需汽 蚀余量 (NPSH) _r (m)	配套 功率 N (kW)
3DG-10	360	1660	2985	2033	80.1	8	2500
	440	1560		2270	82.4		
	496	1470		2453	81		
4DG-8C	500	1670	2985	2953	77	10	3400
	550	1630		3090	79		
	600	1580		3227	80		
5DG-10	500	2210	2987	3764	80	10	4800
	572	2150		4087	82		
	620	2100		4327	82		
DG270-140B	270	1570	2985	1560	74	5	2300
	320	1500		1721	76		
	440	1422		2186	78		
DG270-140C	270	1750	2985	1705	75.5	5	2300
	320	1610		1999	79		
	440	1460		2244	78		
DG400-180B	245	1940	4640	2279	80	12	3200
	385	1910		2444	82		
	415	1800		2513	81		
DG400-180C	400	1975	2985	2778	77	12	4000
	450	1900		2949	79		
	500	1815		3131	79		
DG450-180	400	1920	4640	2790	75	23.5	3200
	450	1825		2869	78		
	500	1700		2932	79		
DG500-140	450	1540	4640	2518	75	23.5	3200
	504	1470		2588	78		
	550	1400		2656	79		
DG600-230	540	2500	5410	4486	82	23.5	4800
	597	2381		4557	85		
	650	2260		4655	86		
DG700-170	600	1810	5000	3699	80	23.5	4500
	671	1730		3811	83		
	740	1640		3937	84		
DG1000-220	900	2320	5255	6939	82	23.5	8000
	1014	2213		7194	85		
	1100	2100		7319	86		

注：1、以上性能 数表为水温20℃时试验换算所得。

- 2、水泵不允许在最小流量小于额定流量30%的情况下运行。
- 3、其它级数性能按比例换算。

Note: 1. The above performance parameter table is made by converting the test with the water temperature at 20°C.

2. It is not allowed for the pump to run when the minimum flow is less than the rated one by 30%.

3. The performance of other stages shall be calculated per proportion.

成套供应范围 Range of completed supply

气动给水泵组的成套供应范围包括:

- 其入口滤前置泵(根据具体要求)及给水泵
- 前置泵驱动电动机, 电动机与前置泵共用底座
- 给水泵出口逆止阀
- 最小流量装置, 包括再循环阀、截止阀以及流量测量装置
- 联轴器及其它附件
- 稀油站

电动给水泵组的成套供应范围包括:

- 给水泵、前置泵及其入口滤网
- 电动机
- 液力偶合器及工作油、润滑油冷油器
- 给水泵出口逆止阀
- 最小流量装置, 包括再循环阀、截止阀以及流量测量装置
- 联轴器及其它附件
- 稀油站

其中电动机、再循环阀、液力偶合器、稀油站、逆止阀、前置泵、截止阀、及流量测量装置等配套设备也可由客户自行采购, 我公司负责技术协调。

The completed supply of steam-powered water supply pump group includes:

- Its inlet filtering pre-pump(upon the real requirement) and water supply pump
- Actuating motor for the pre-pump, motor and prepump mutually used foundation
- Check valve at the outlet of the water supply pump
- Minimum flow device: includes recycling valve, stop valve and flow measurer
- Clutch and other accessories
- Oil thinnig station

The completed supply of electric water supply pump group includes:

- Water supply pump, pre-pump and its inlet filtering screen
- Motor
- Hydraulic coupler and oil cooler for both working and lubricating oils
- Check valve at the outlet of the water supply pump
- Minimum flow device: includes recycling valve, stop valve and flow measurer
- Clutch and other accessories
- Oil thinnig station

Of which the motor, recycling valve, hydraulic coupler, oil thinning station, check valve, pre-pump, stop valve and flow measurer can also be purchased by clients and this Co. will be in charge of technical coordination.

订货须知 Notice at order

客户订购我公司产品, 需提供以下 数:

- 给水泵出口、抽头(增压级)流量
- 给水泵出口、前置泵入口压力(或泵组扬程)
- 给水温度
- 泵组形式(气动泵或电动泵)
- 安装尺寸订货时根据合同要求提供

Please provide the following parameters when to order the product of this Co.:

- Flows at the outlet of the water supply pump and the tap (boosting class)
- Pressures(or the pump group's head) at the outlet of the water supply pump and the inlet of the pre-pump
- Water supply temperature
- Pump group's type(steam-powered or electric pump)
- The installation dimensions are to be provide at order upon the contract requirement

Milestone(China) Engineering & Manufacturing Co., Ltd.

Email: admin@milestonecn.com Web: www.mstpump.com

Add: South Industrial Zone, Baoding, Hebei, China.

Tel: +86-312-7532200 Fax: +86-312-3085383